




1

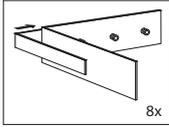


FK-0230

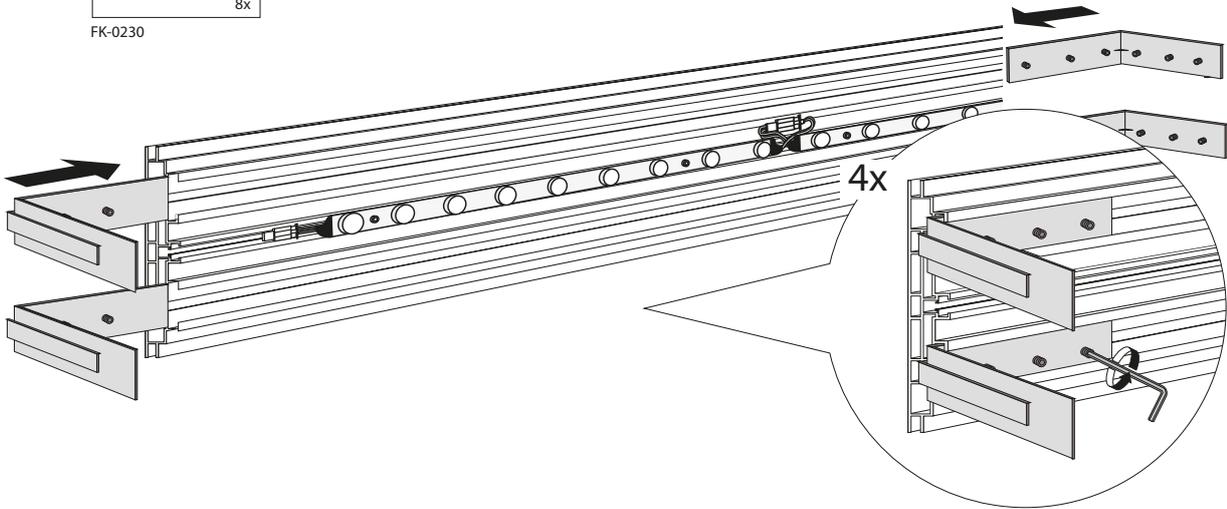



2

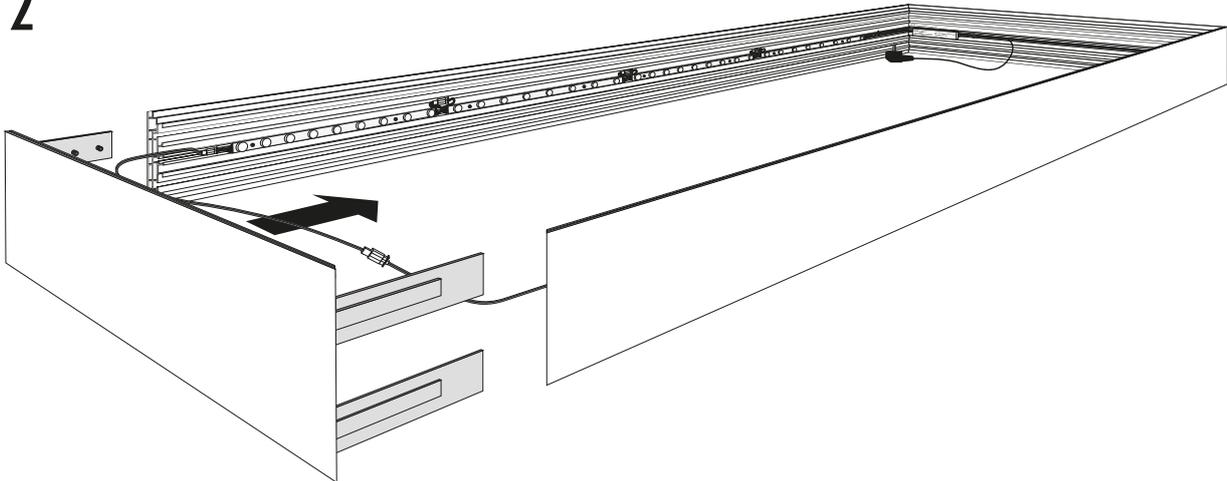











### OPTION FOR EXTENSION

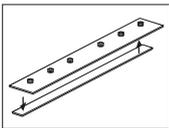

FK-0530

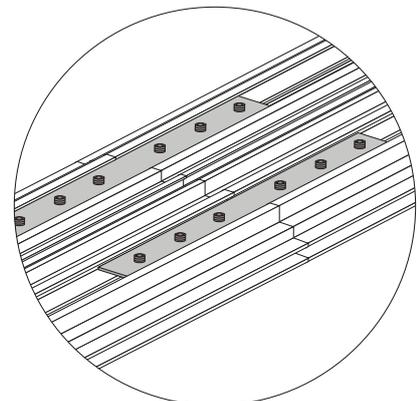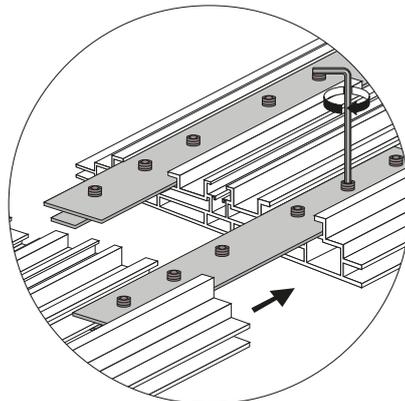

3

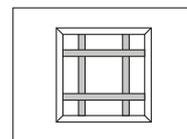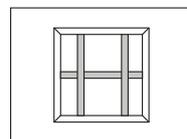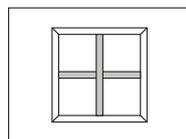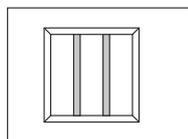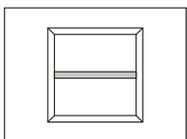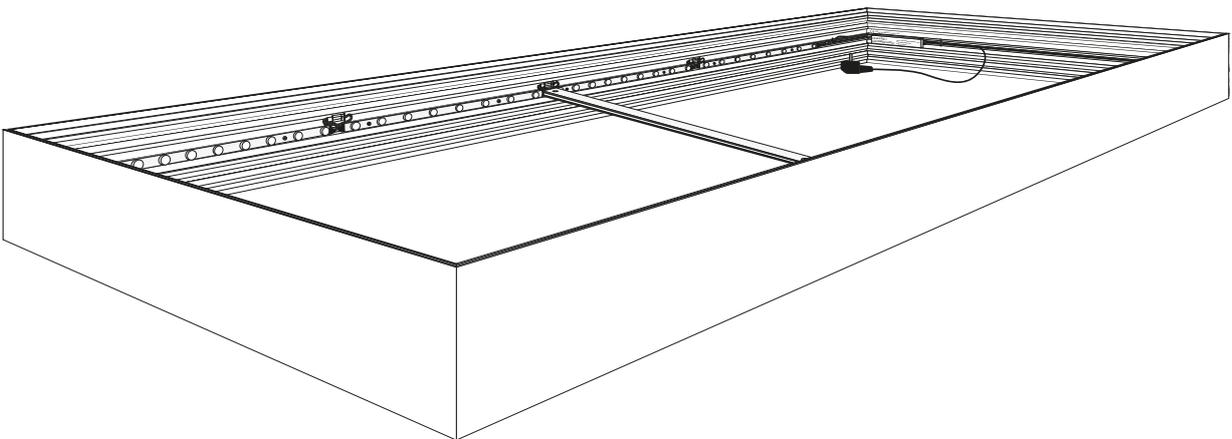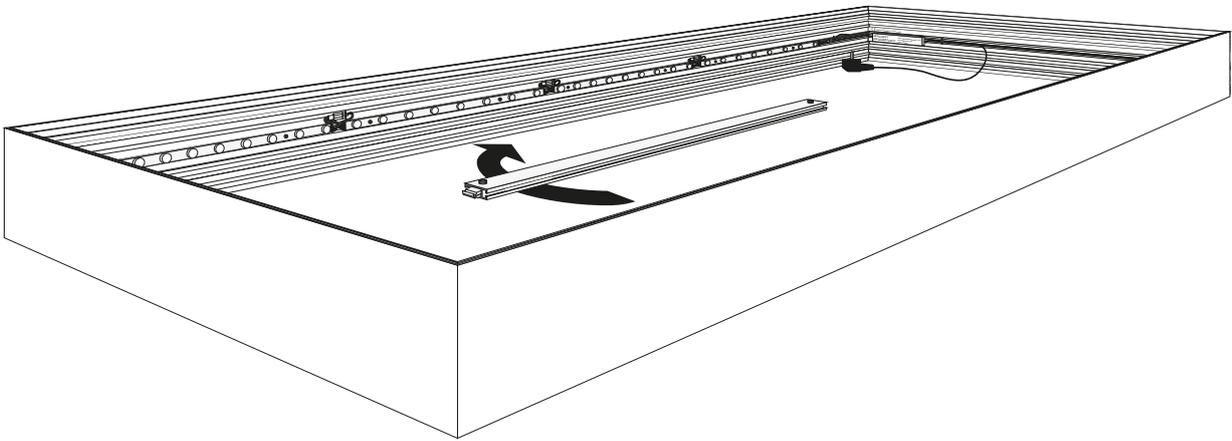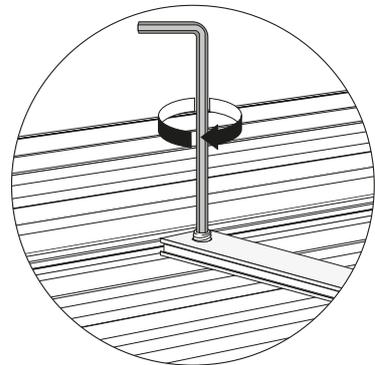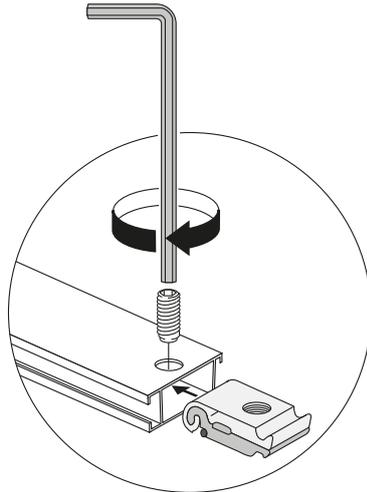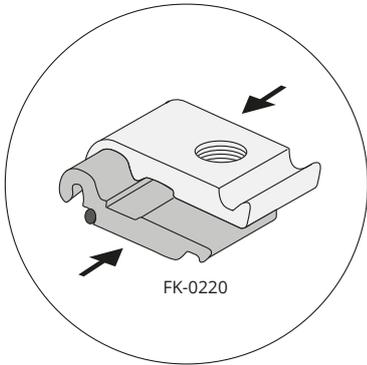

Option 1


Option 2

Option 3


Option 4

Option 5



### OPTION FOR FOOTPLATE

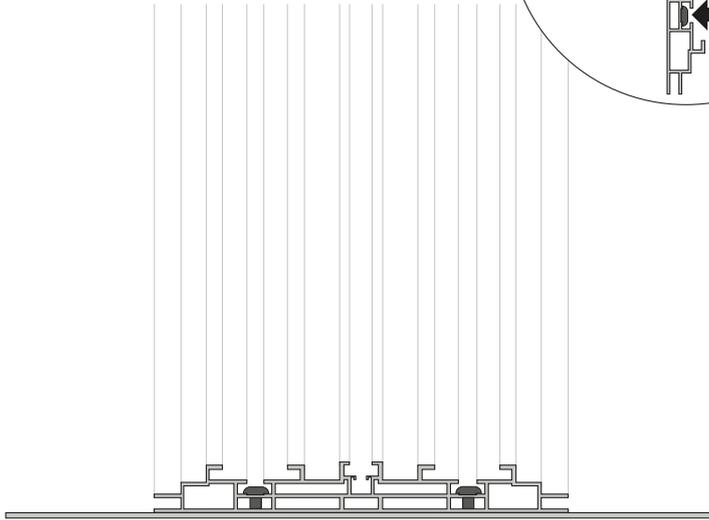


FK-0300

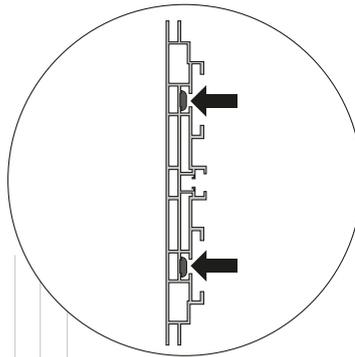


FK-0140

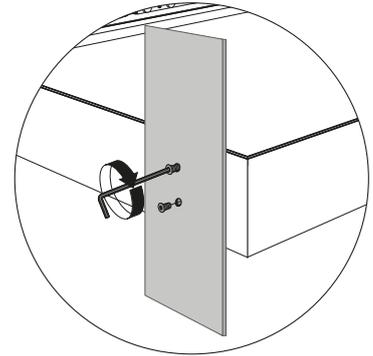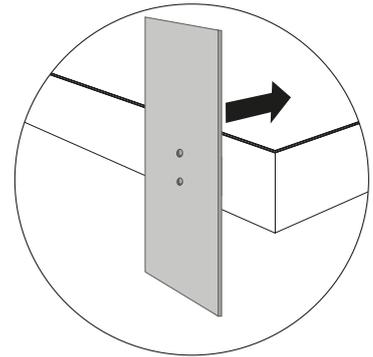


### OPTION CEILING MOUNT

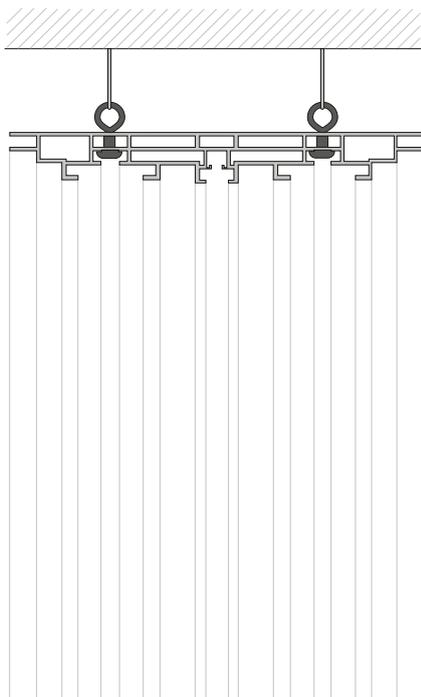


FK-0300

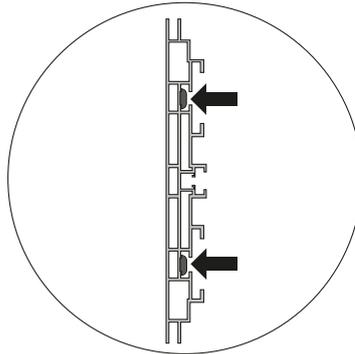

FK-0360

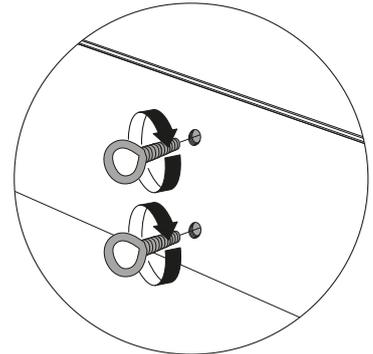

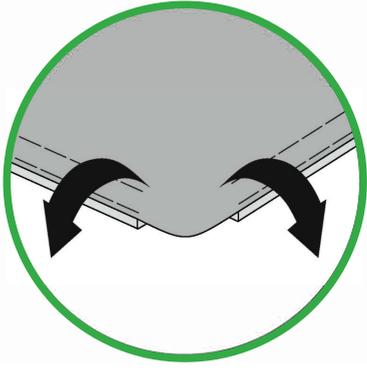


Insert the silicone edge into the frame.



CORRECT



WRONG

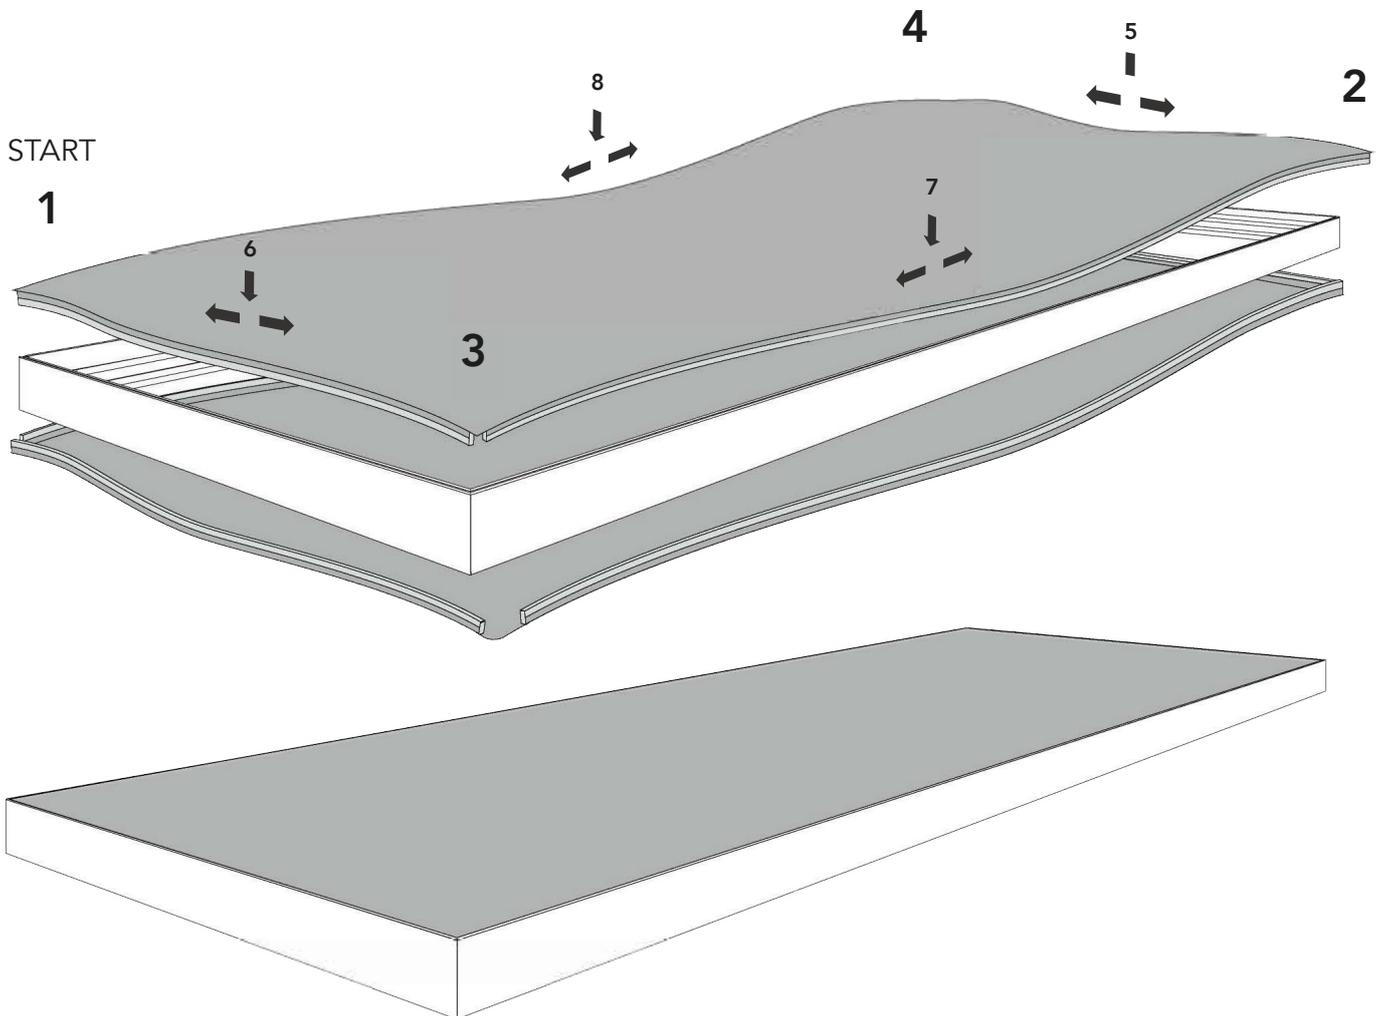

Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**. Next, insert corner **3**, followed by its opposite corner **4**. Make sure the silicone edge faces inward. Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.