

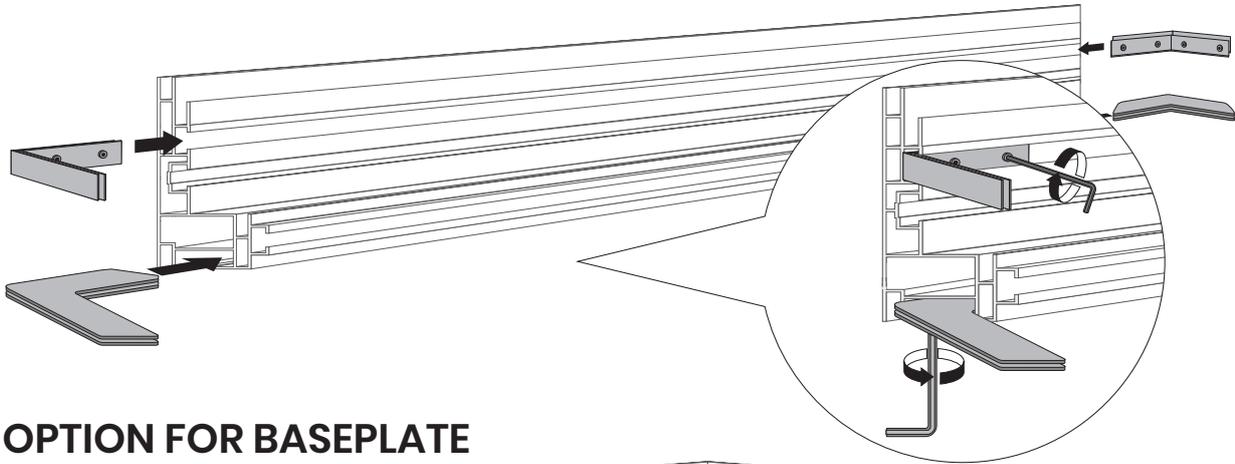



1

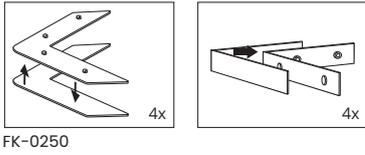






OPTION FOR BASEPLATE

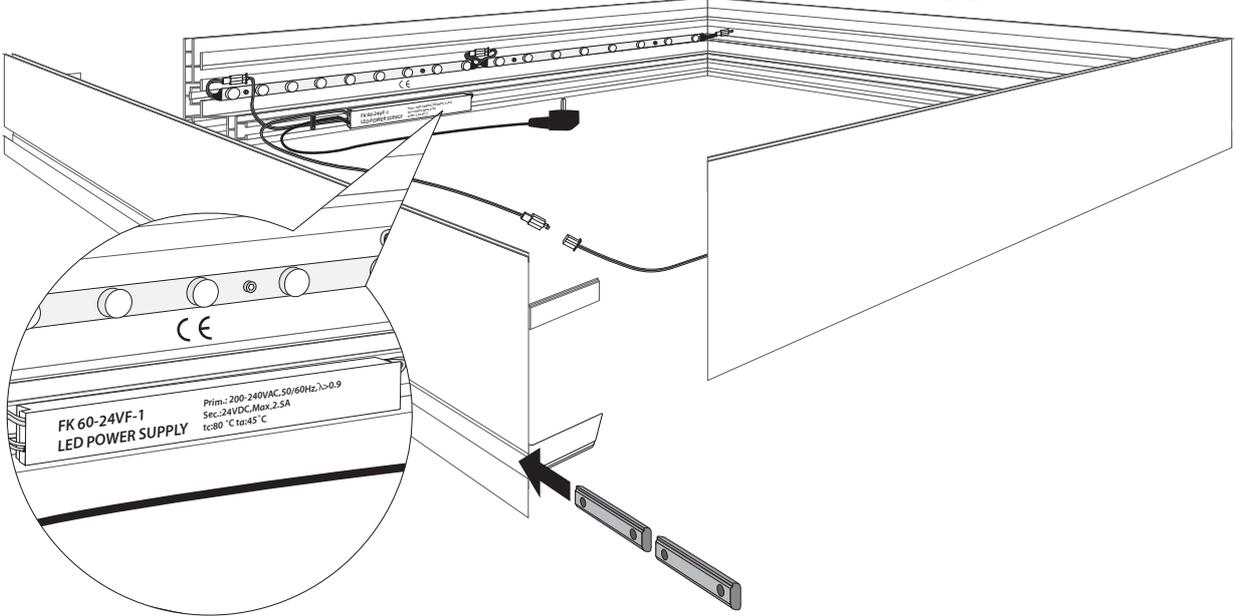


2

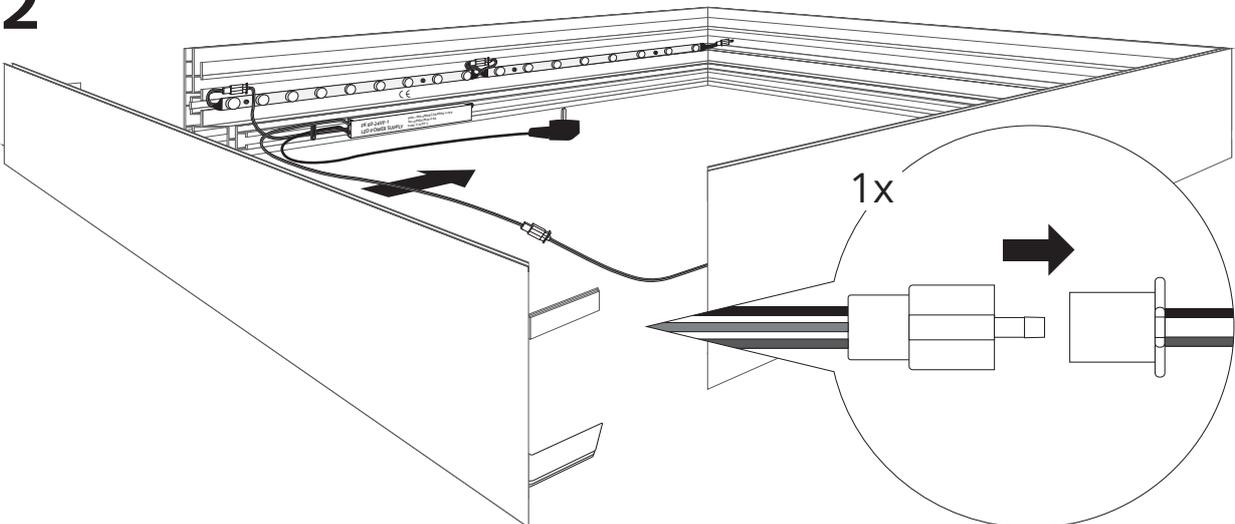


3

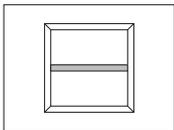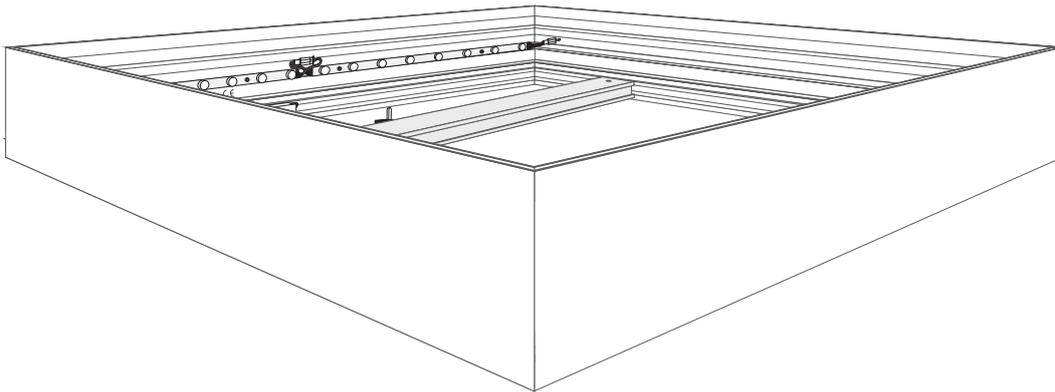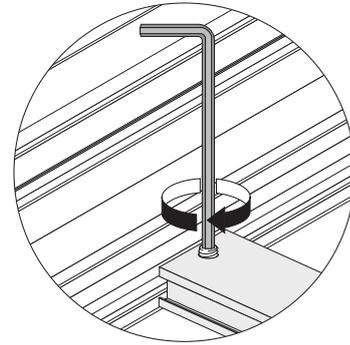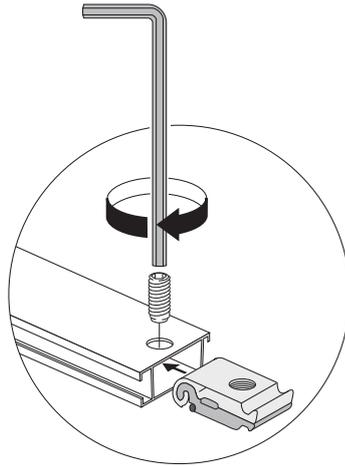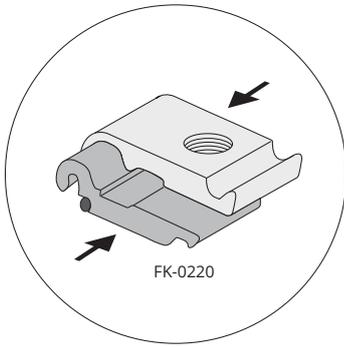


Option 1

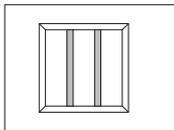


Option 2

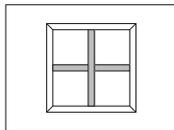

Option 3

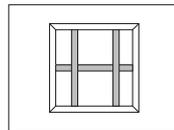


Option 4



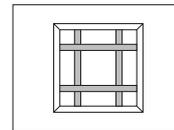


Option 5

OPTION FOR EXTENSION

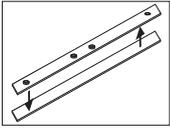





FK-0500

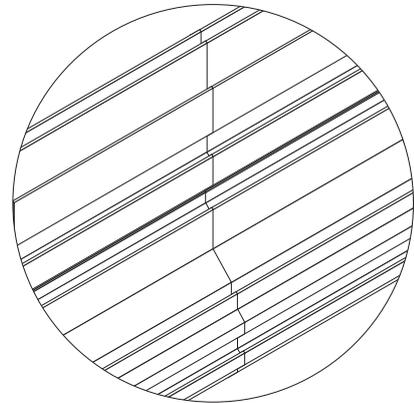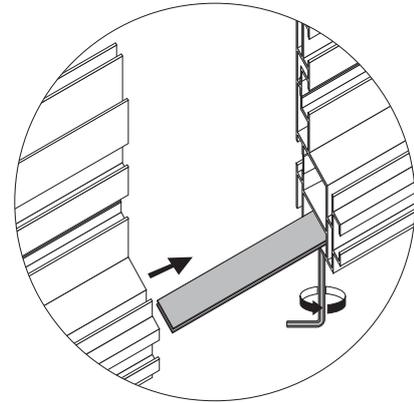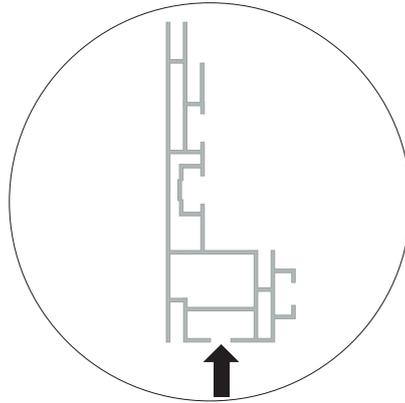

OPTION FOR BASEPLATE


Up facing frame is the Lightbox 120

FK-0120 / FK-0130

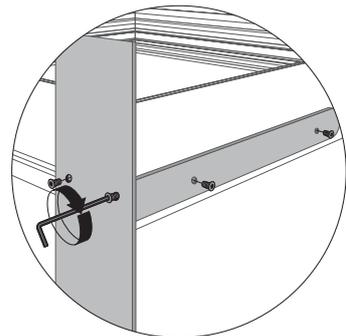
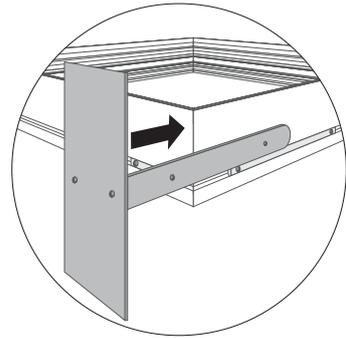
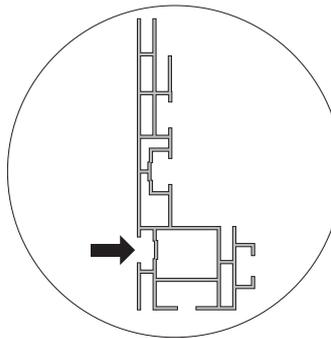
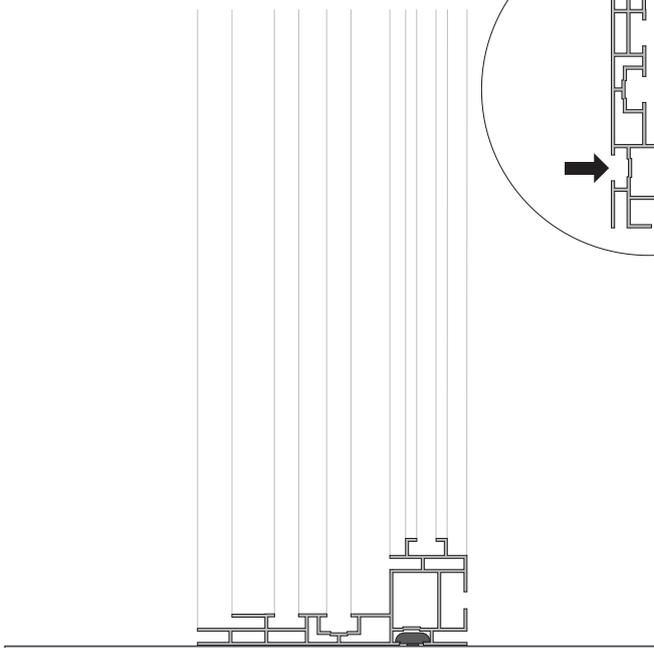


OPTION WALL MOUNT

Up facing frame is the Lightbox 120

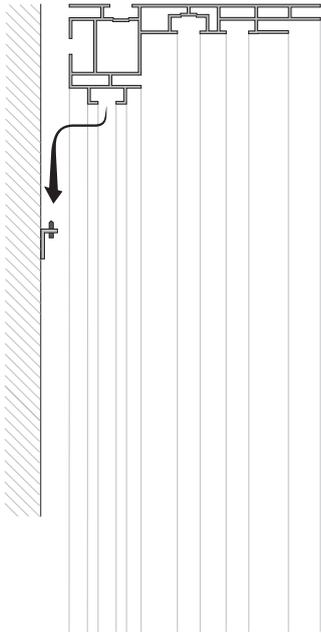


FK-0414

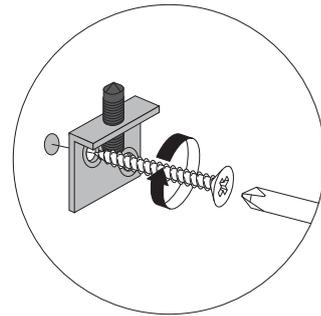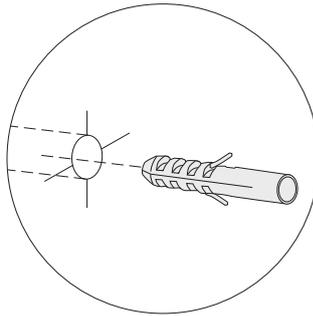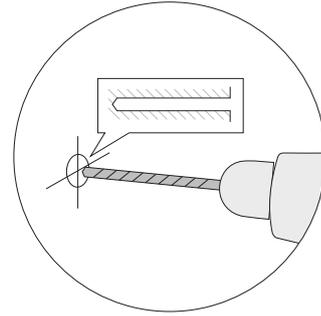
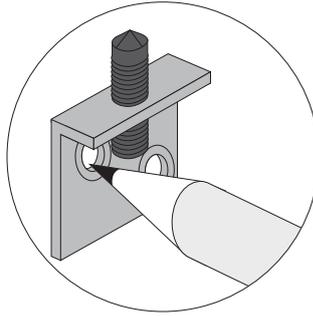


OPTION CEILING MOUNT


Up facing frame is the Lightbox 120

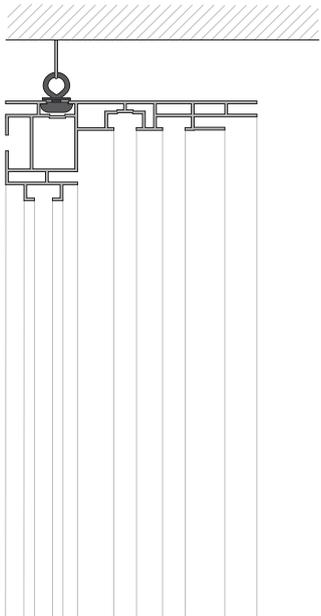


FK-0300

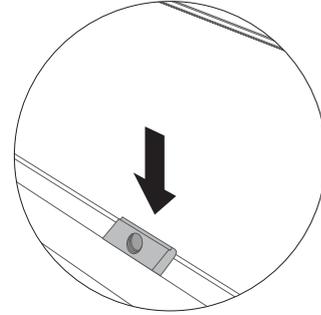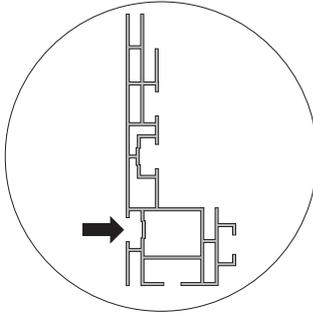


FK-0360

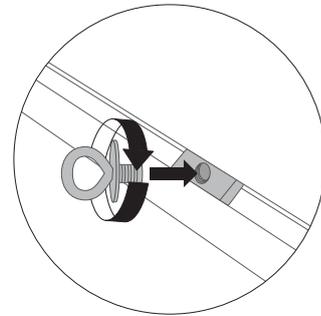

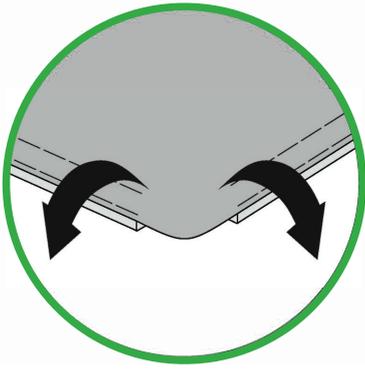


Insert the silicone edge into the frame.

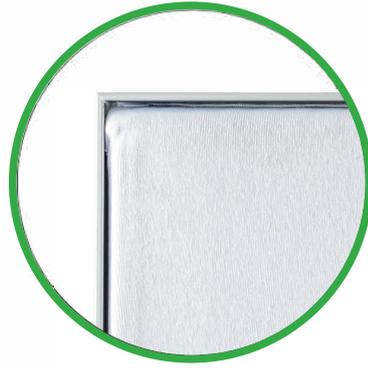

CORRECT



WRONG

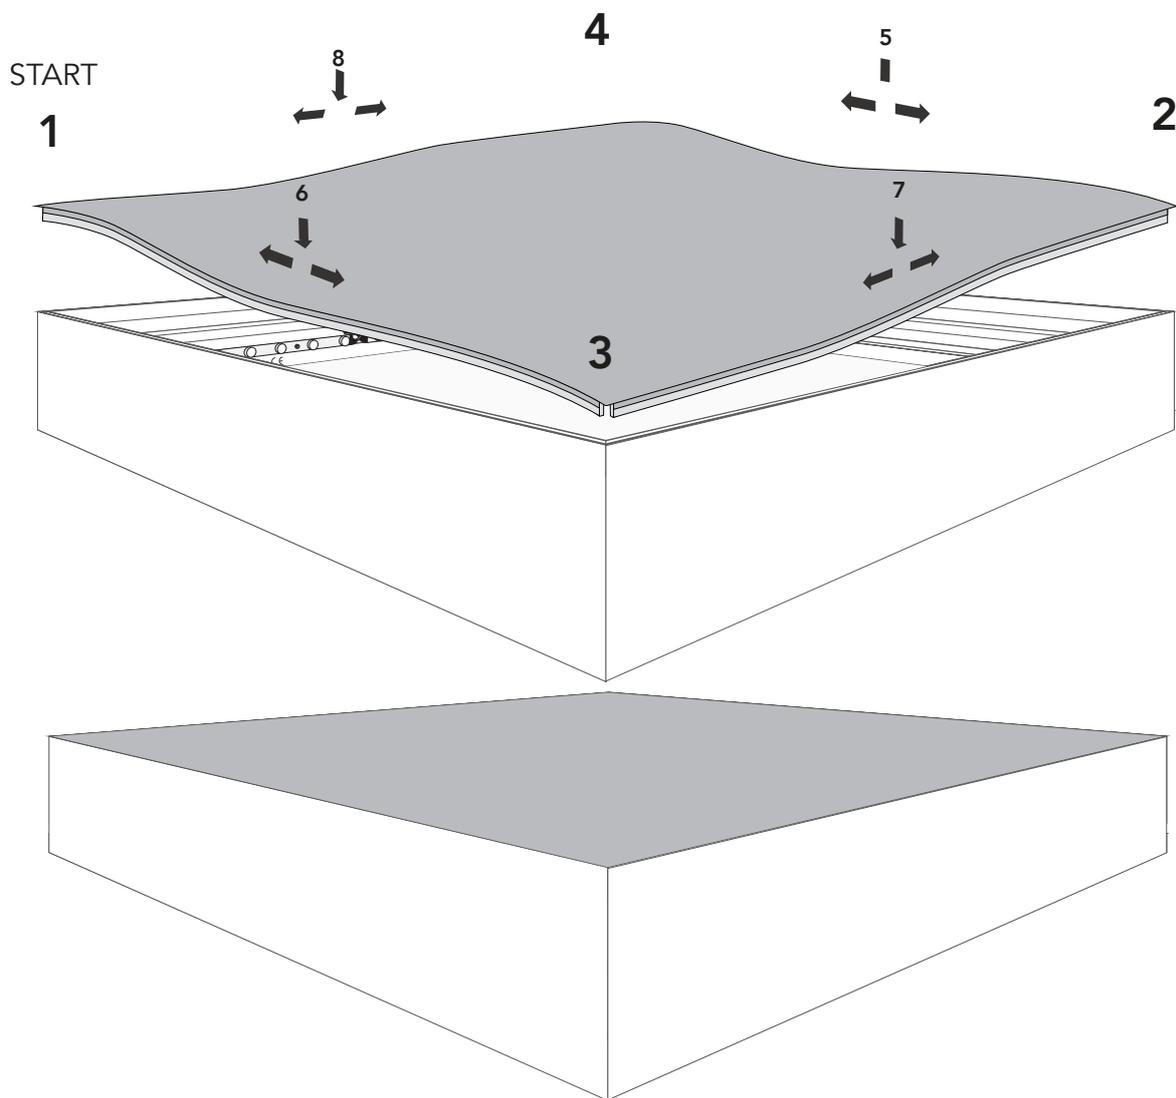

Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**. Next, insert corner **3**, followed by its opposite corner **4**. Make sure the silicone edge faces inward. Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.