




1

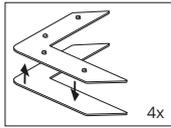


FK-0200

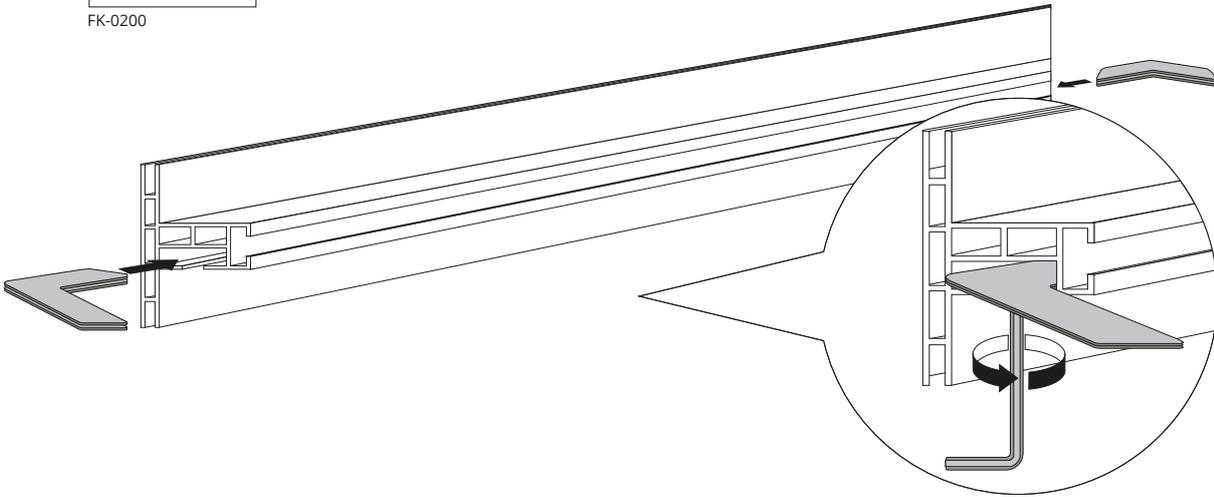



### OPTION FOR FOOTPLATE

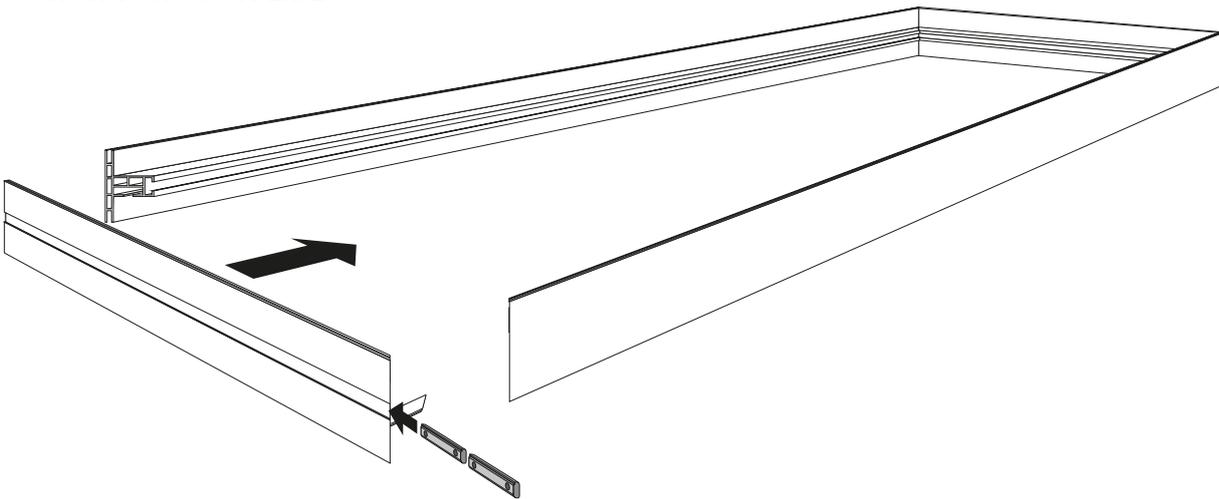







### OPTION FOR EXTENSION

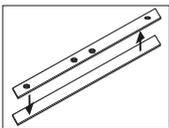


FK-0500

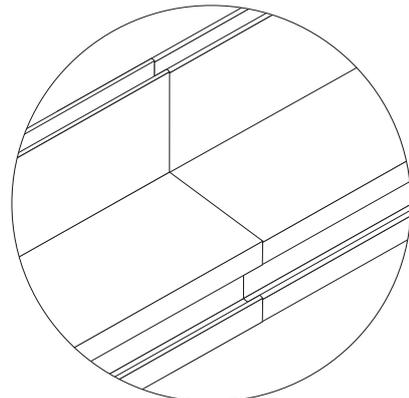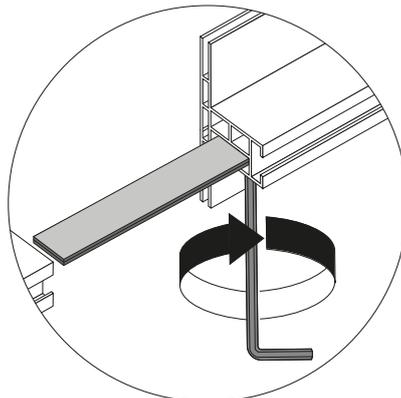


2

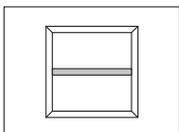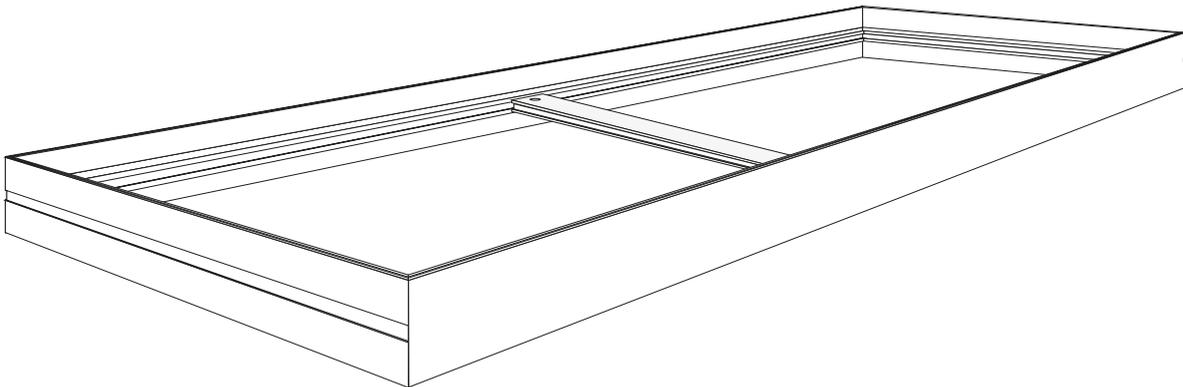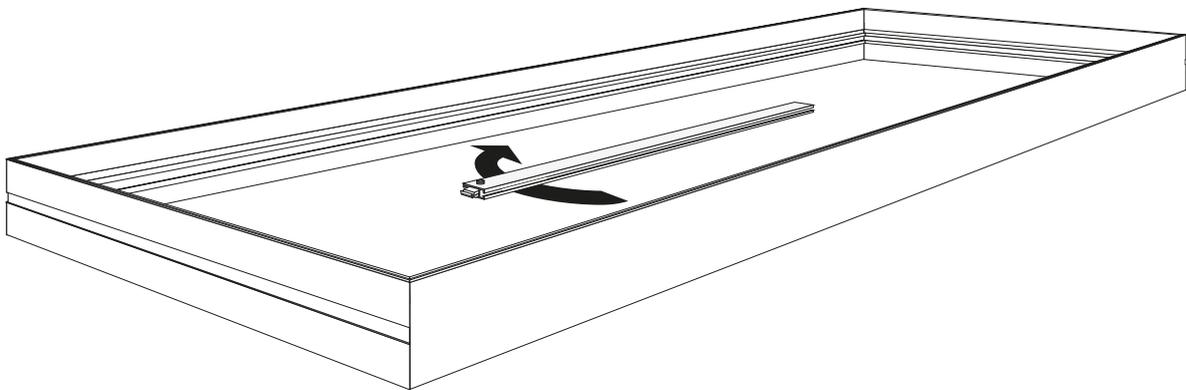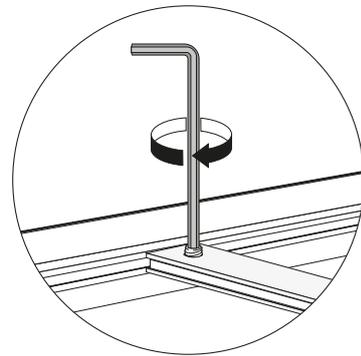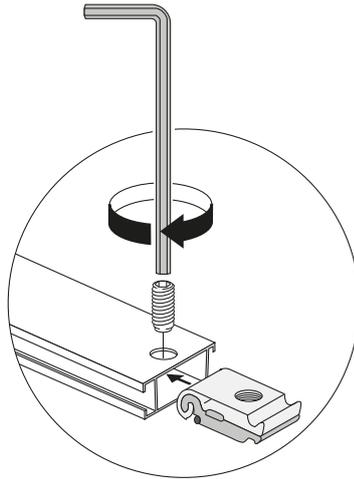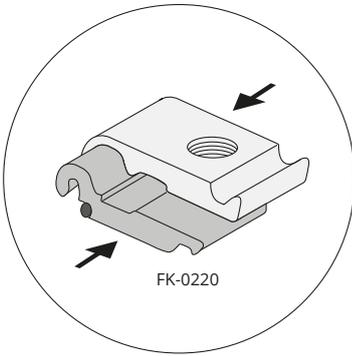


Option 1

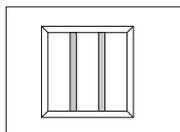


Option 2

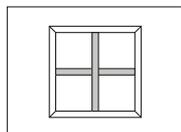

Option 3

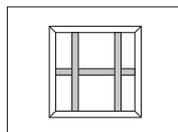



Option 4

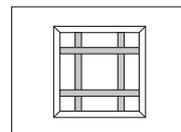


Option 5

### OPTION CEILING MOUNT


Up facing frame is the Double 80

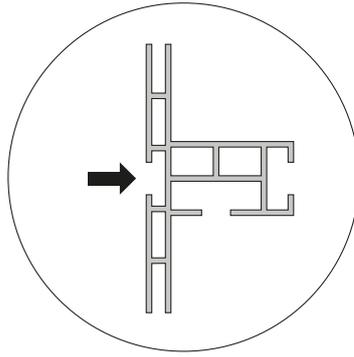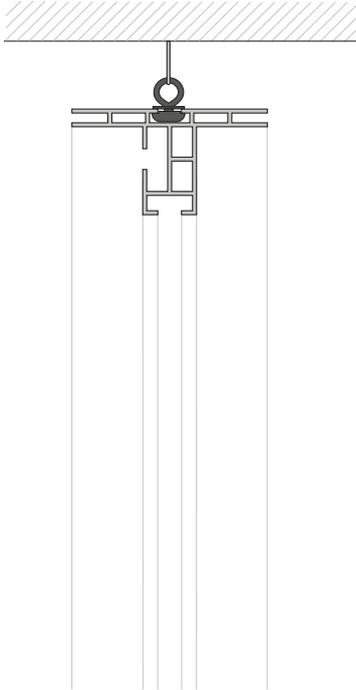

FK-0300

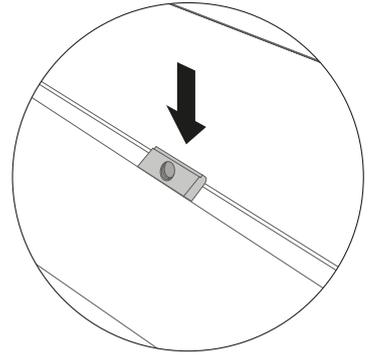



FK-0360

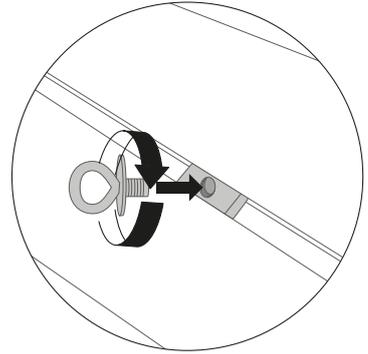


### OPTION FOR FOOTPLATE

Up facing frame is the Double 80

FK-0100 / FK-0105 / FK-0107 / FK-0110 / FK-0170

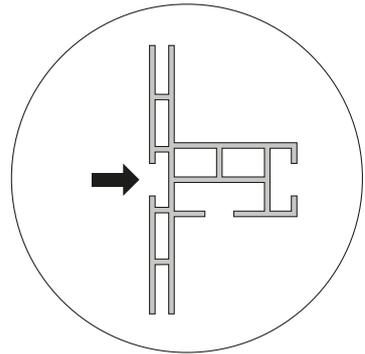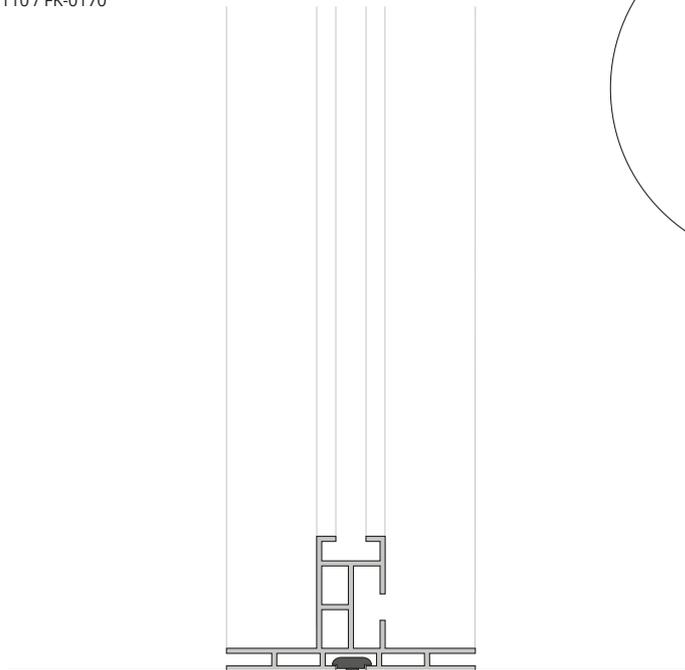

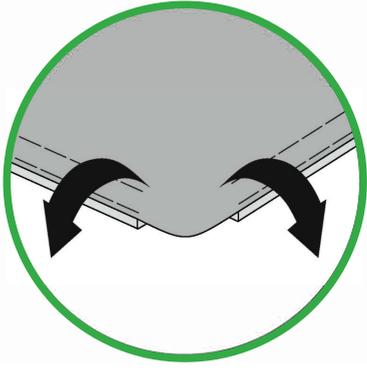


Insert the silicone edge into the frame.



CORRECT



WRONG

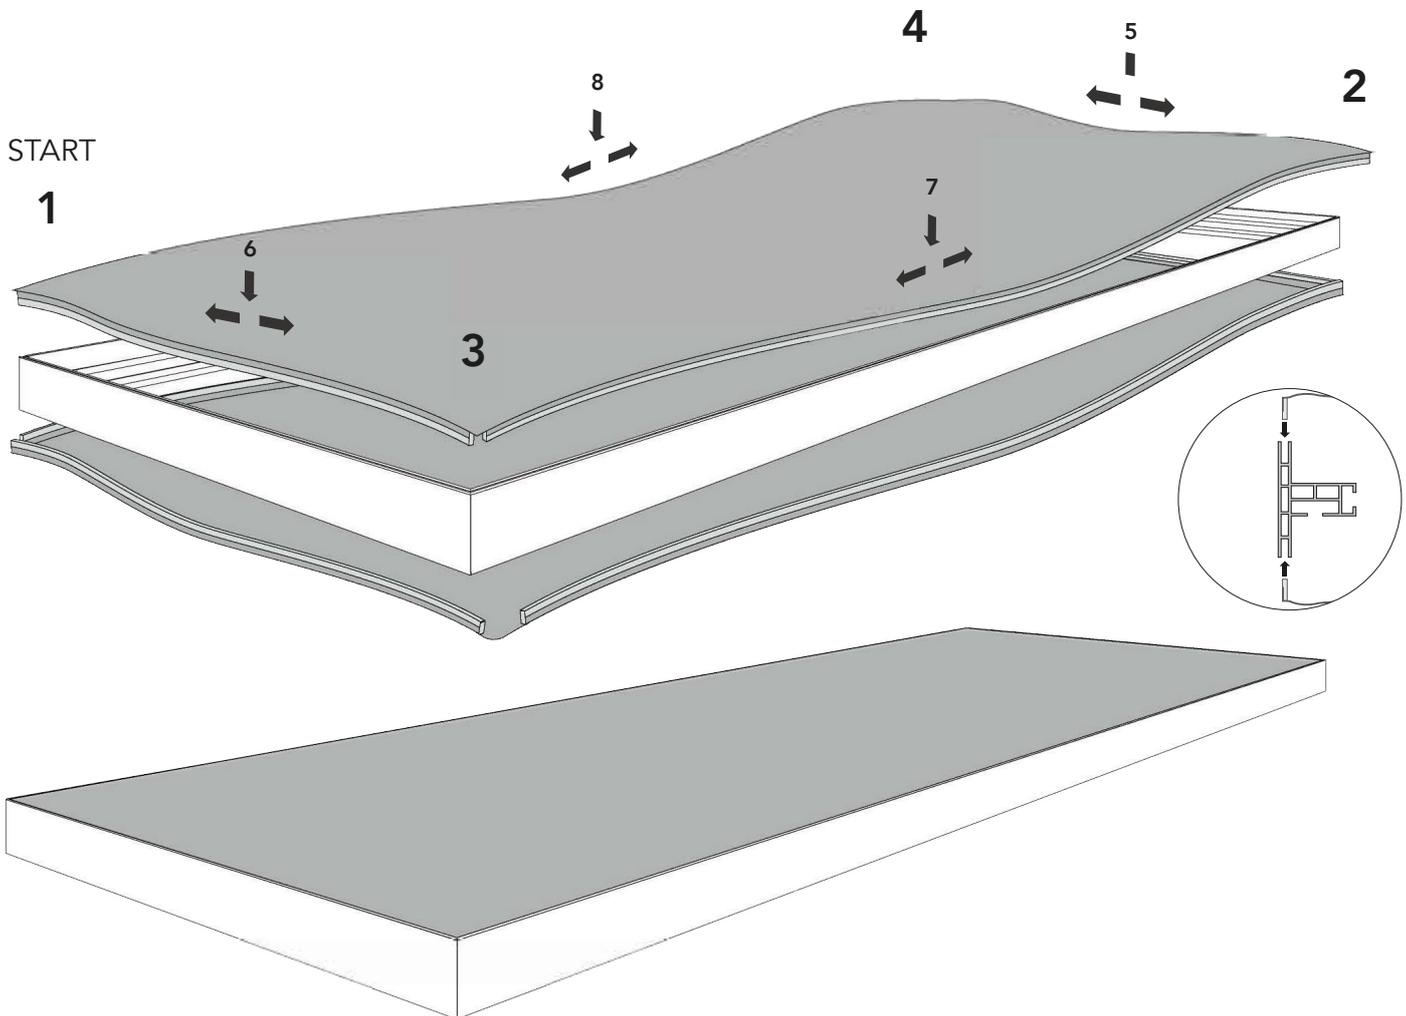

Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**. Next, insert corner **3**, followed by its opposite corner **4**. Make sure the silicone edge faces inward. Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.