

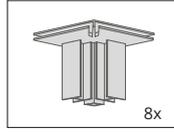
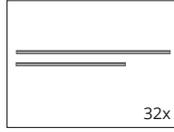
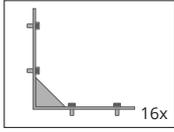
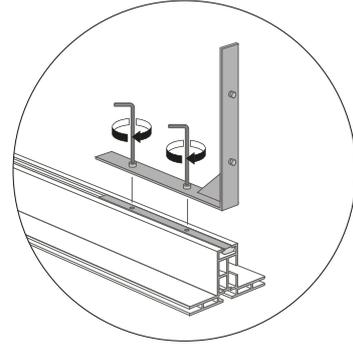


1

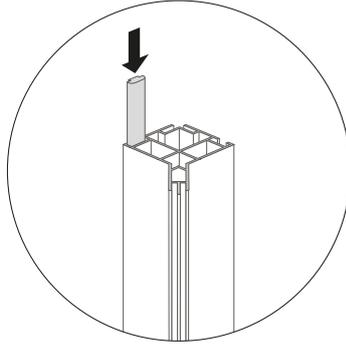


O-FORMATION CARRÉ 80






INSTALLING THE CORNERS

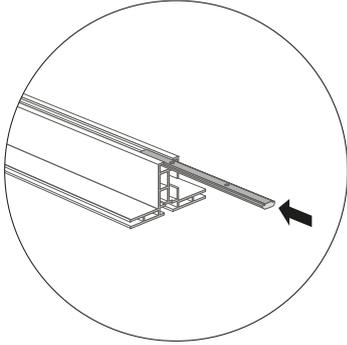





2x


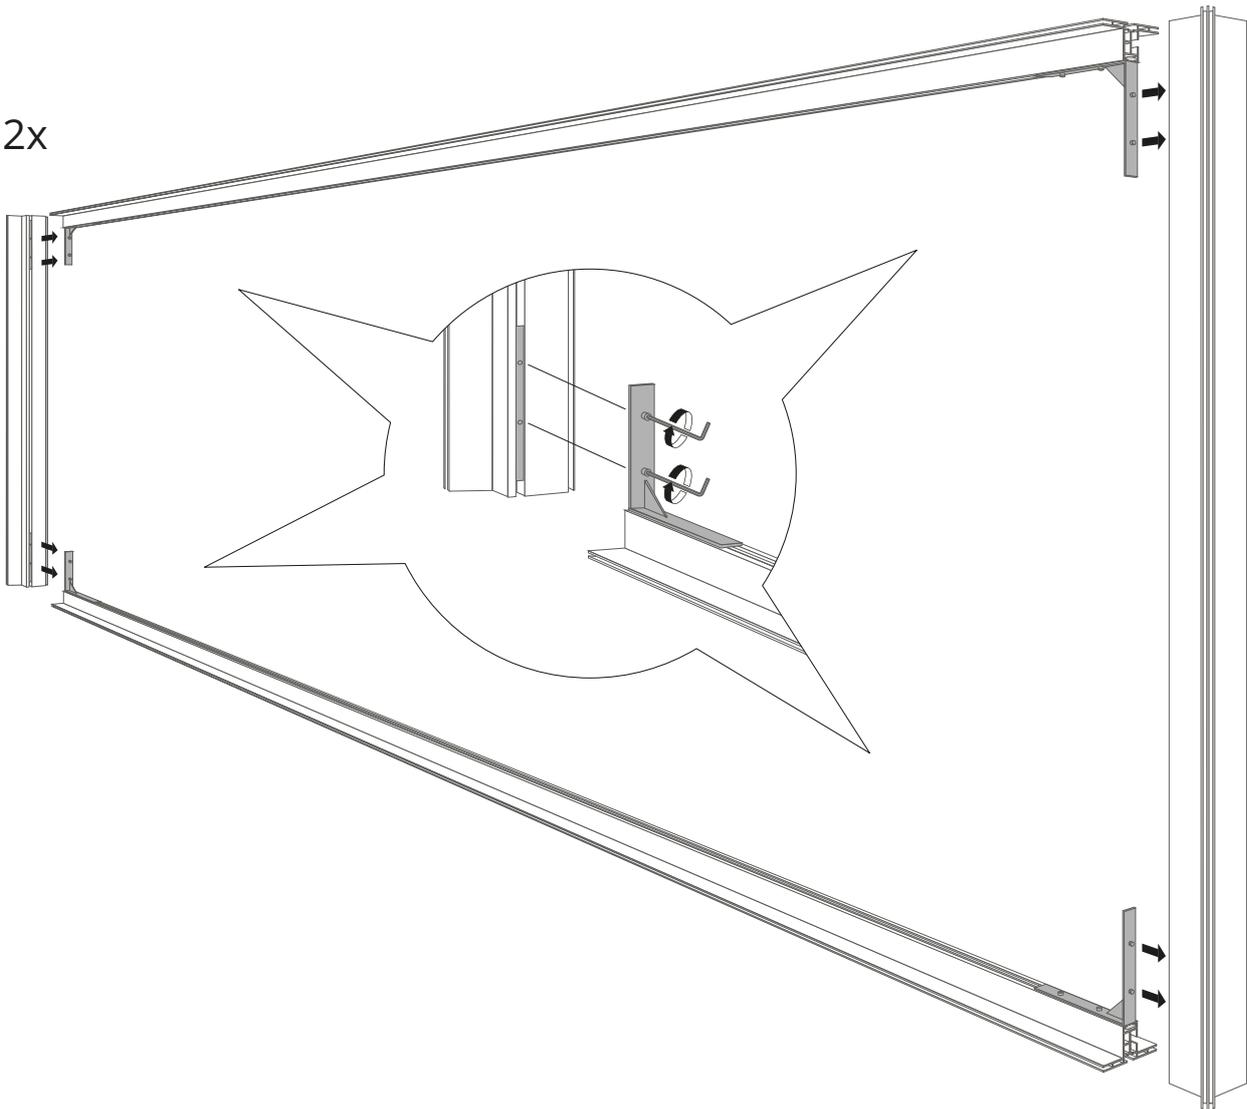


2

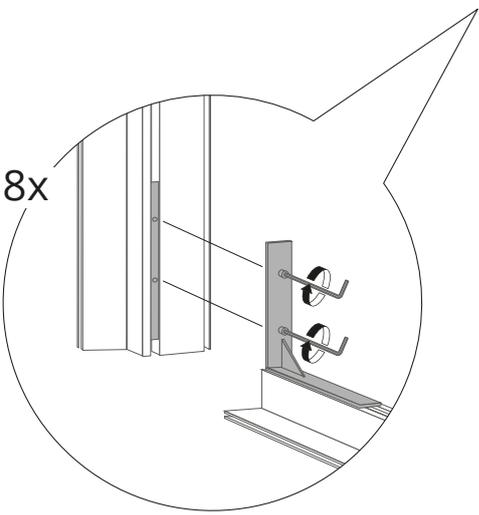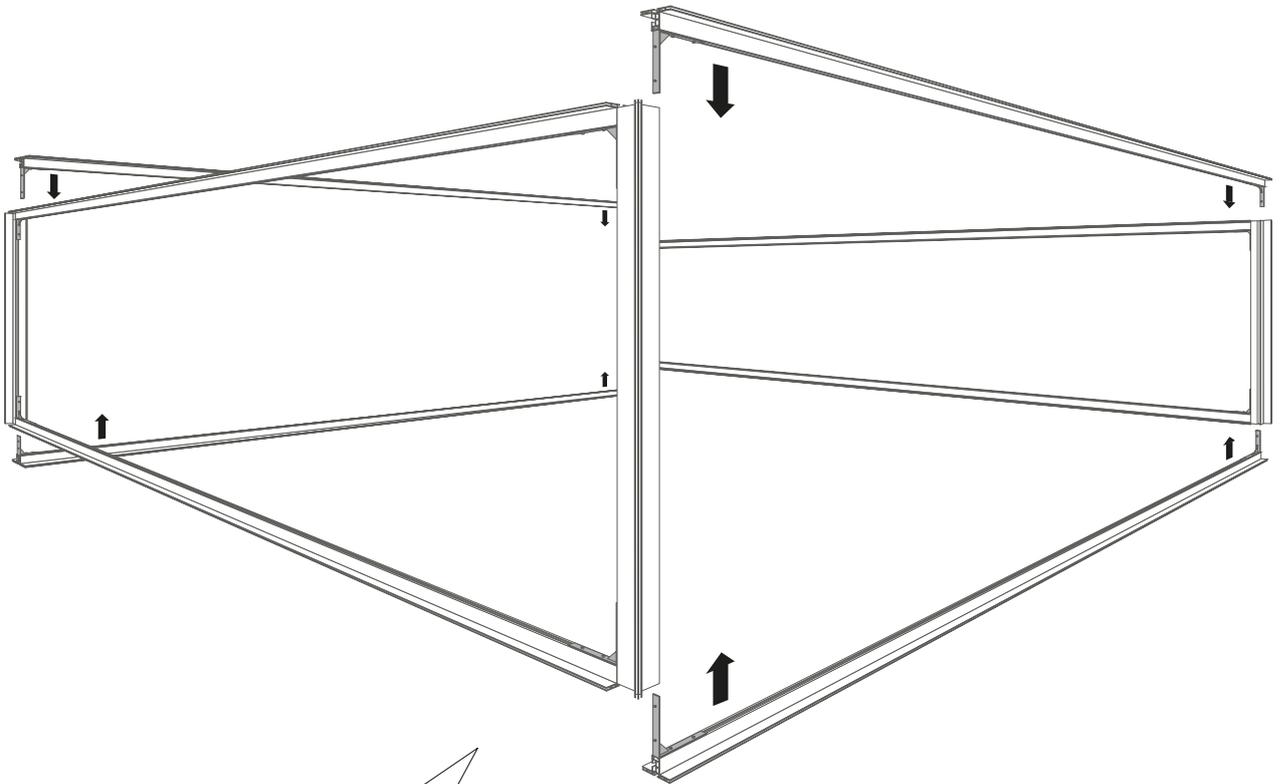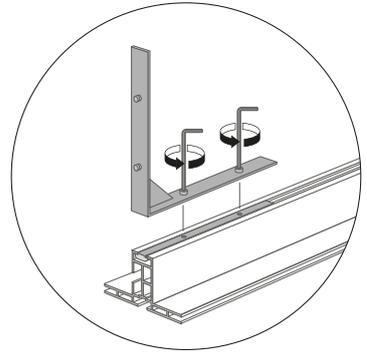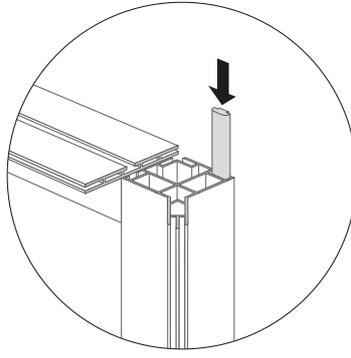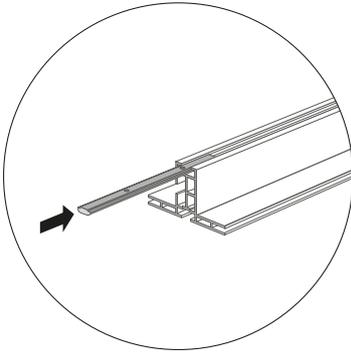


3

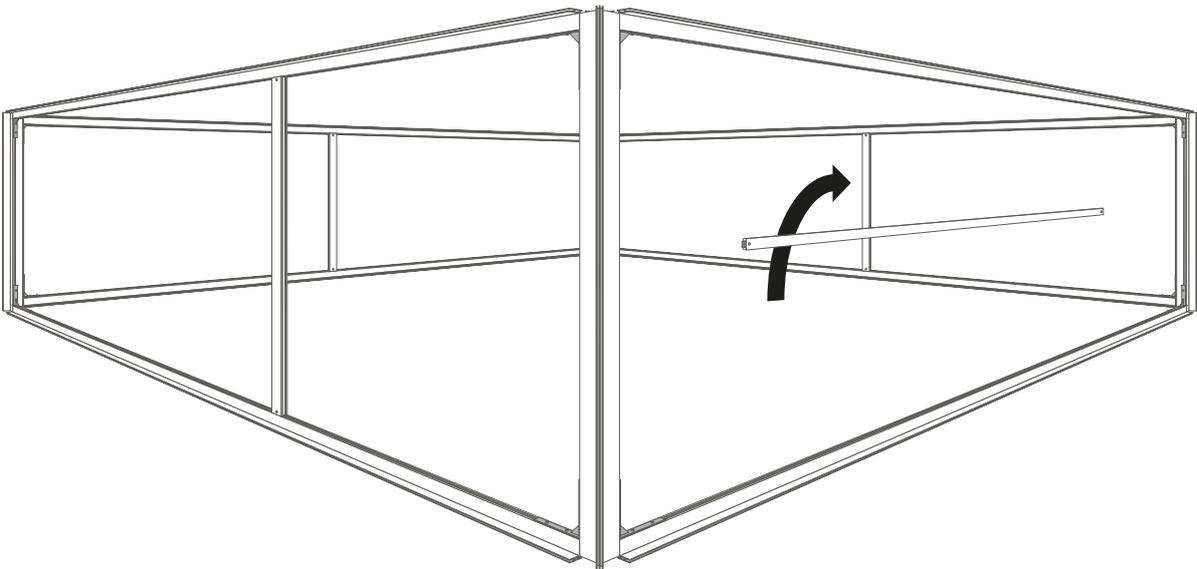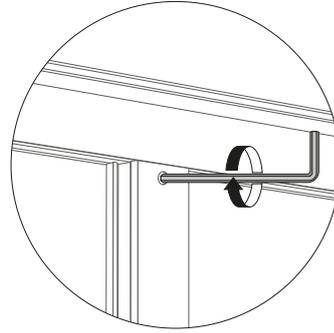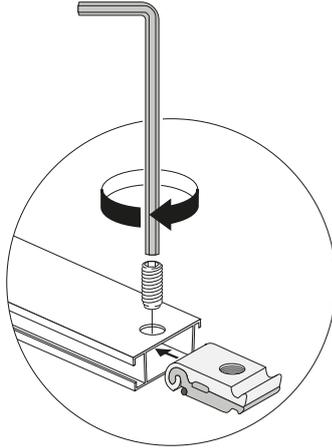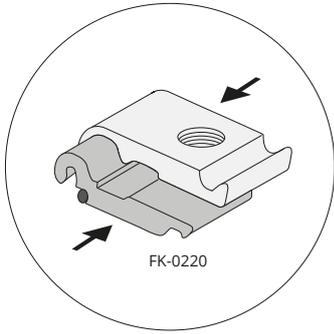

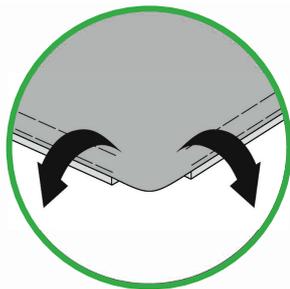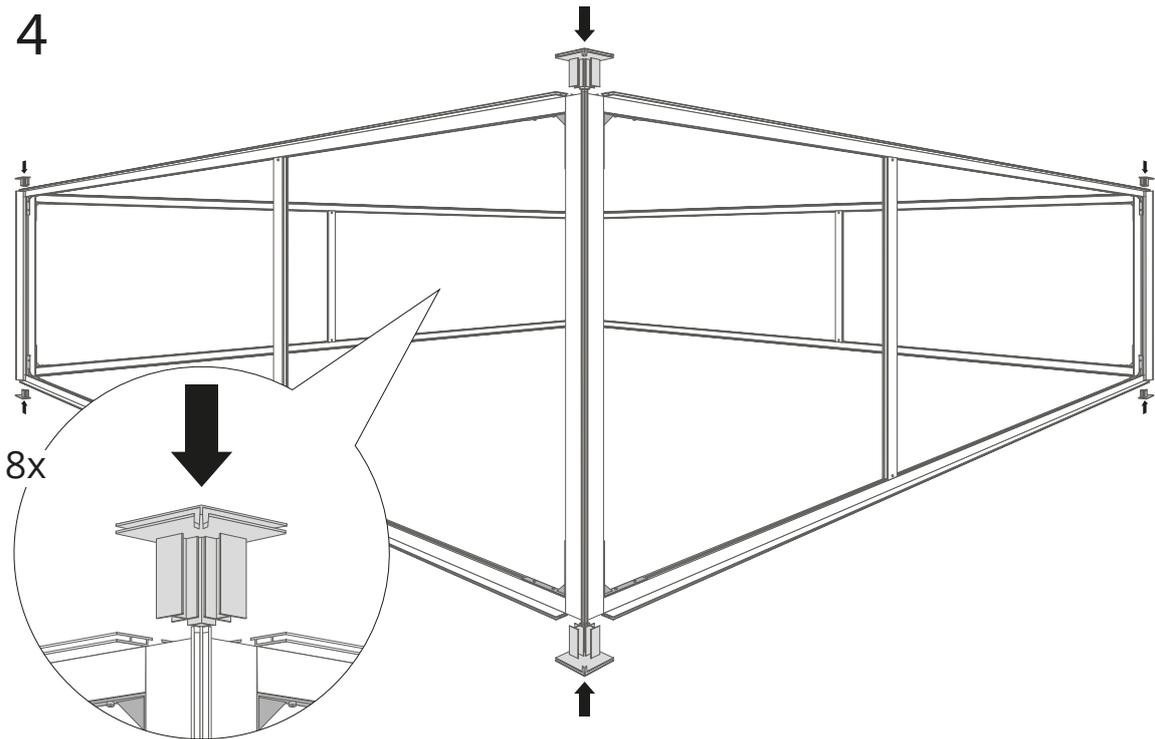


Insert the silicone edge into the frame.

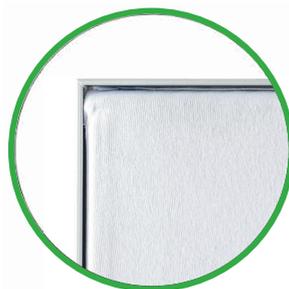

CORRECT



WRONG

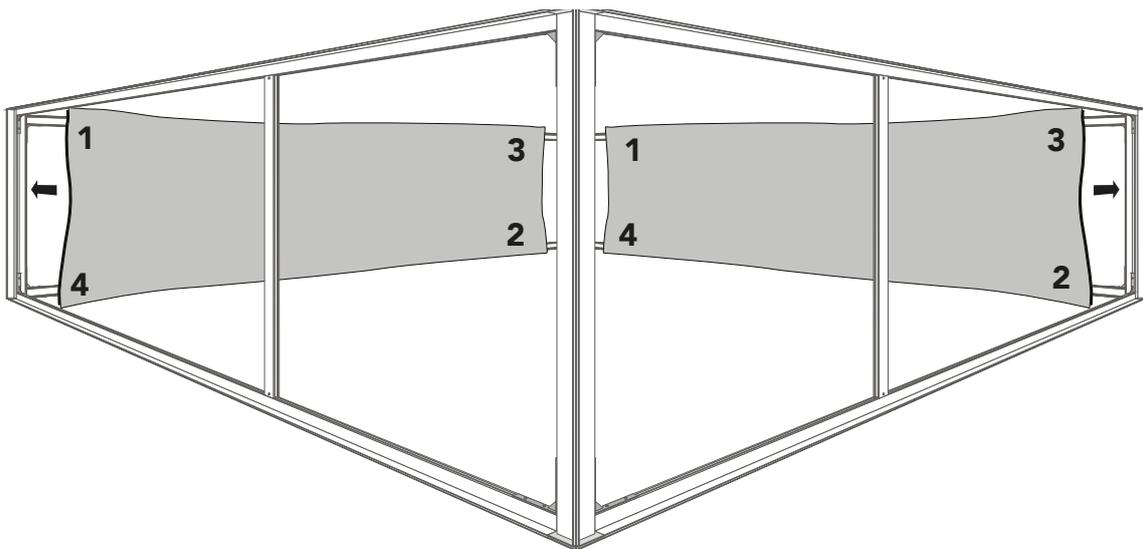



Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**.

Next, insert corner **3**, followed by its opposite corner **4**.


Make sure the silicone edge faces inward.

Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.

6

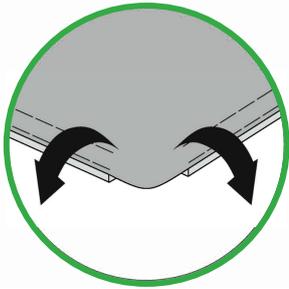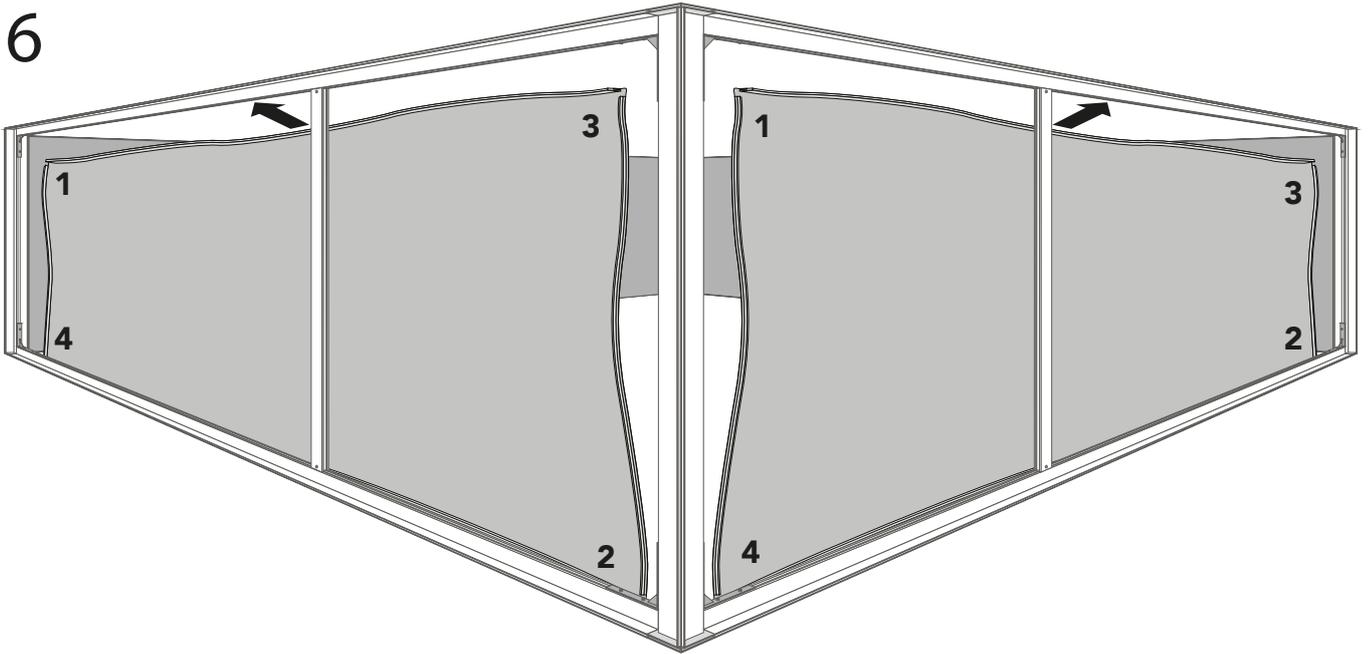

Insert the silicone edge into the frame.

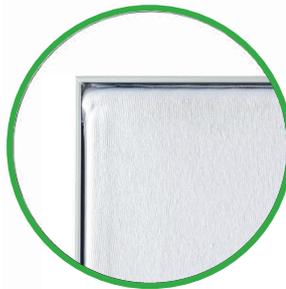


CORRECT



WRONG

7


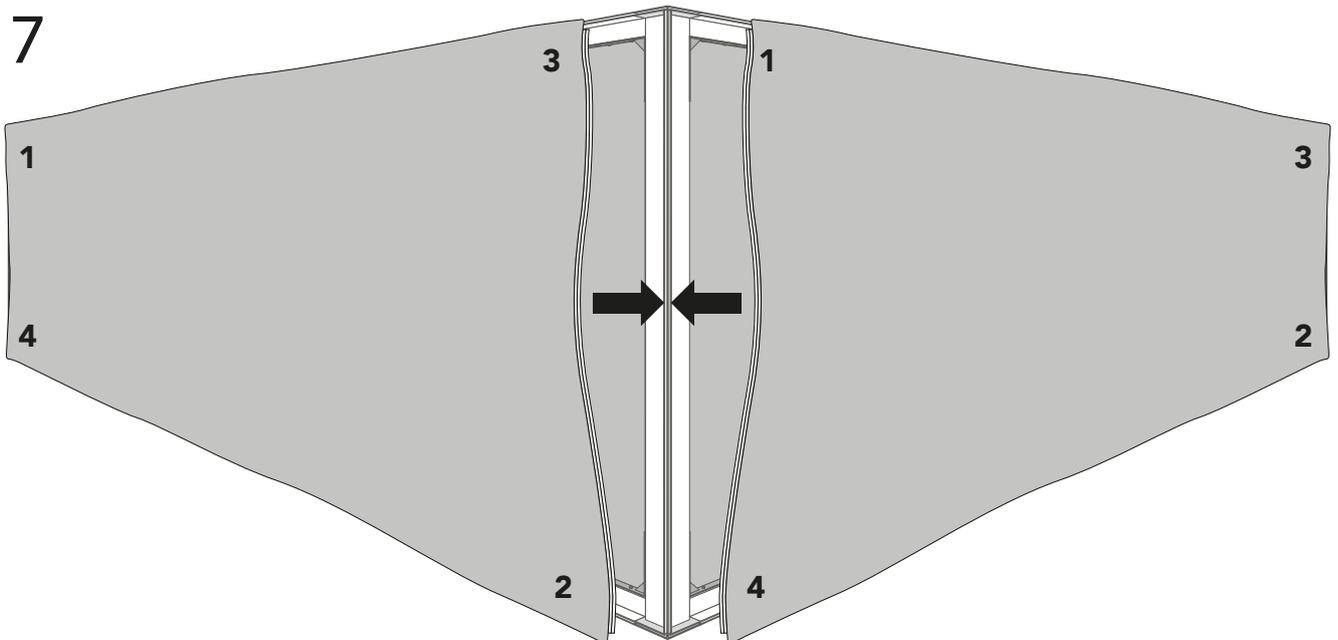


Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**.


Next, insert corner **3**, followed by its opposite corner **4**.

Make sure the silicone edge faces inward.

Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.

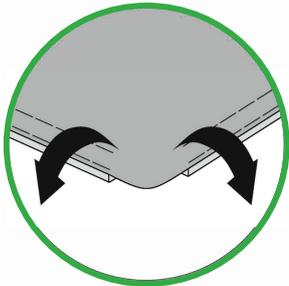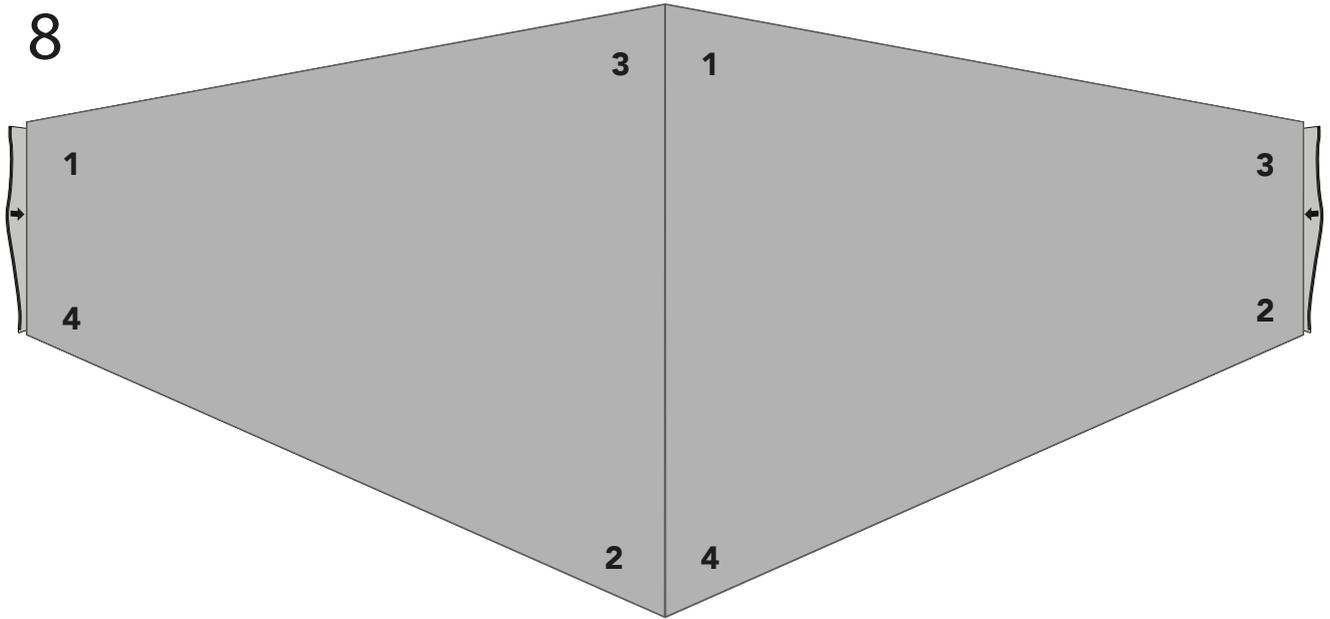


Insert the silicone edge into the frame.

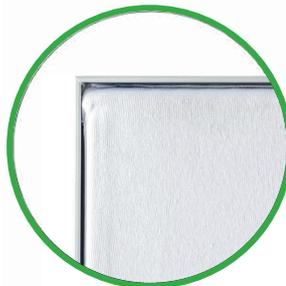

CORRECT



WRONG

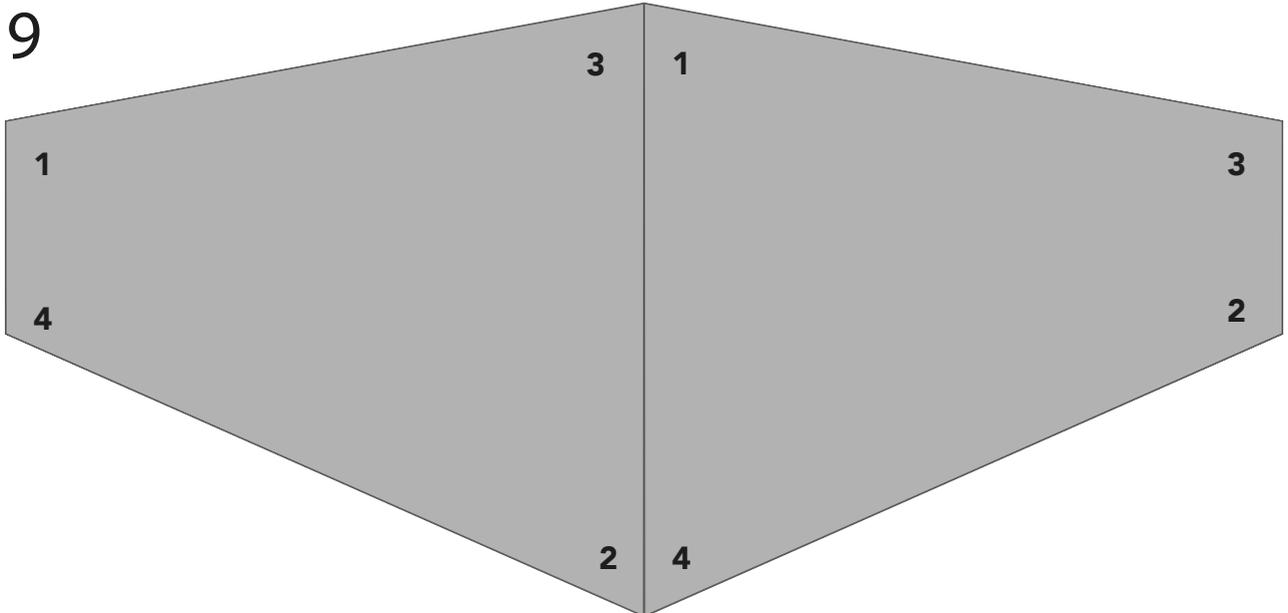

Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**.

Next, insert corner **3**, followed by its opposite corner **4**.

Make sure the silicone edge faces inward.

Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.