



1

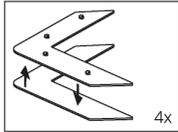


FK-0200

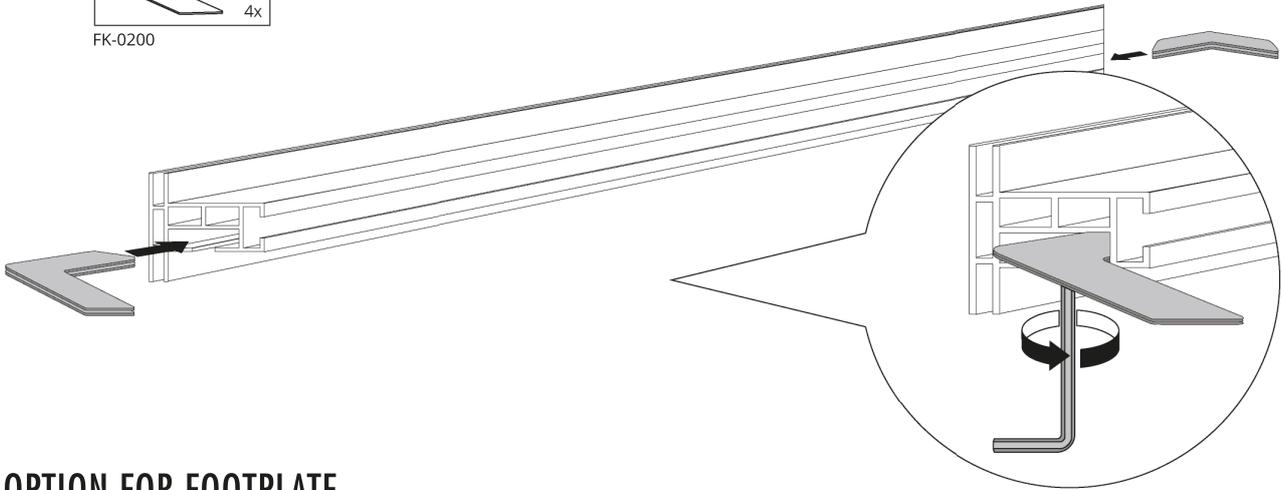


OPTION FOR FOOTPLATE



Down facing frame is the Double 44

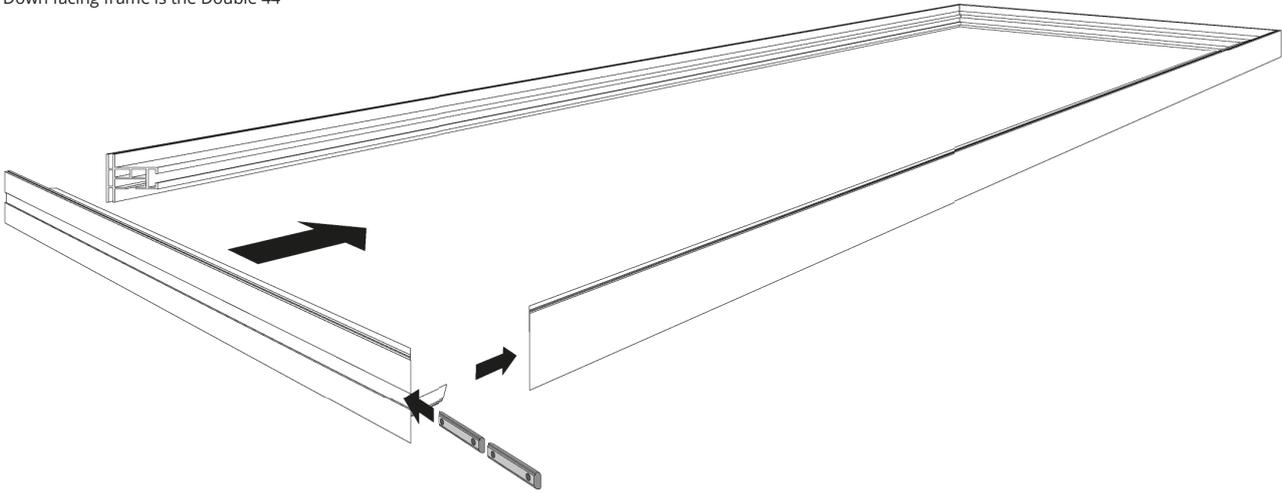











OPTION FOR EXTENSION

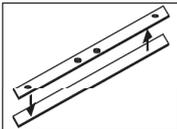

FK-0500

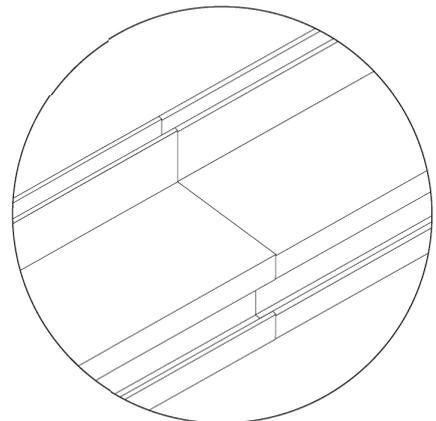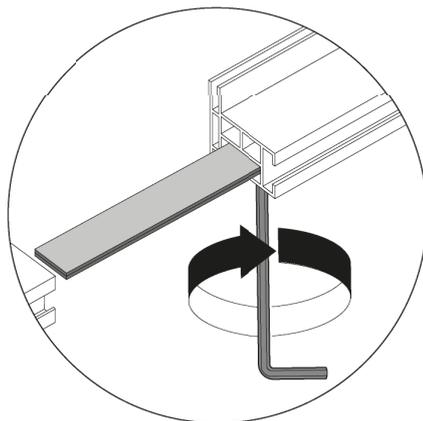


2

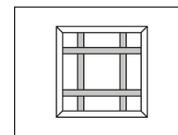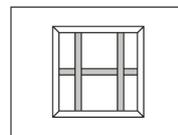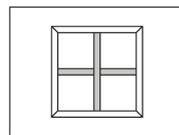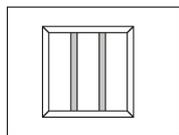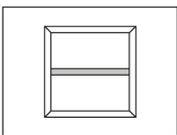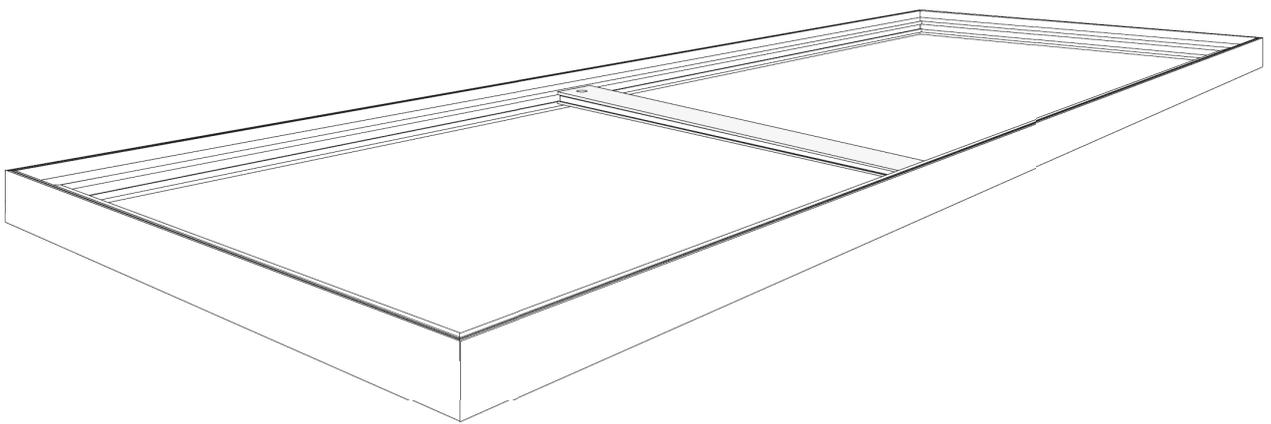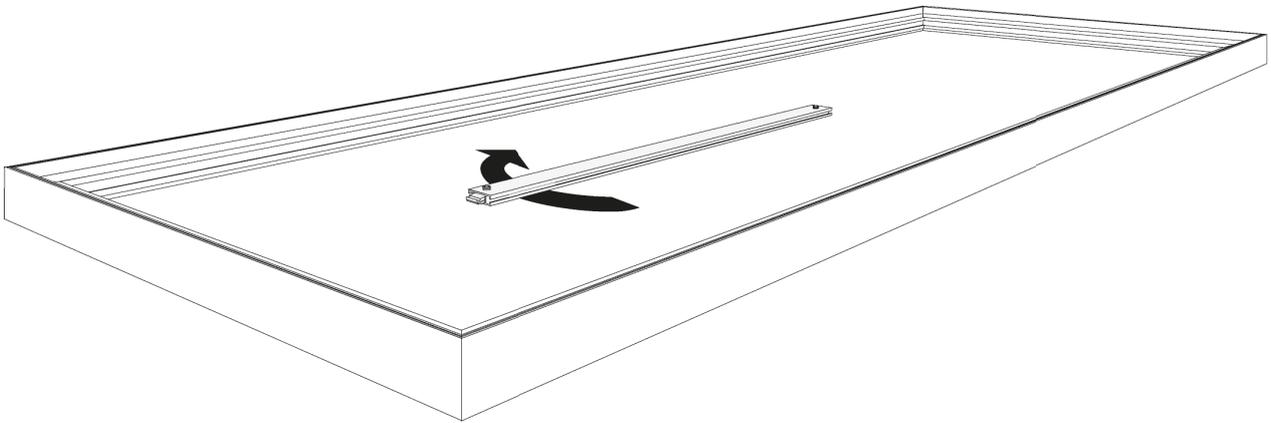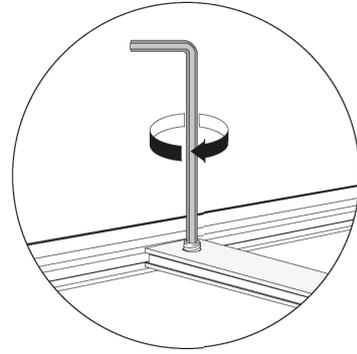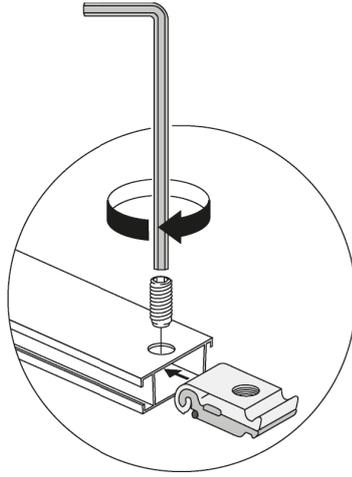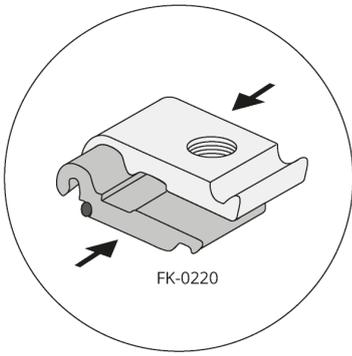


OPTION CEILING MOUNT


Up facing frame is the Double 44

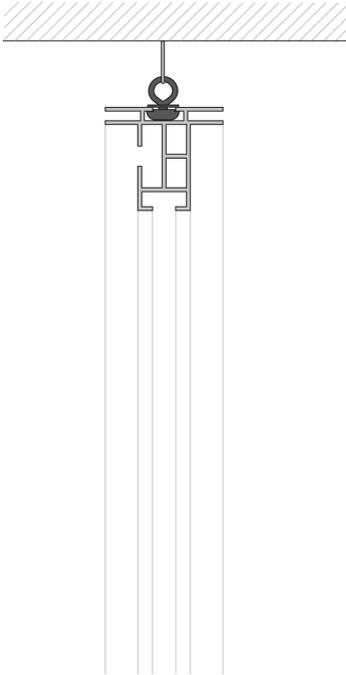


NF-04440

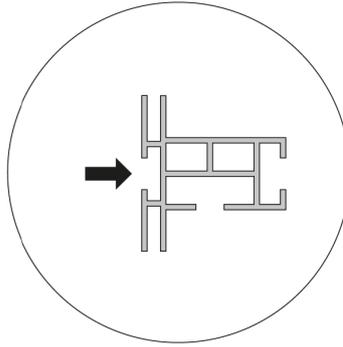

FK-0300

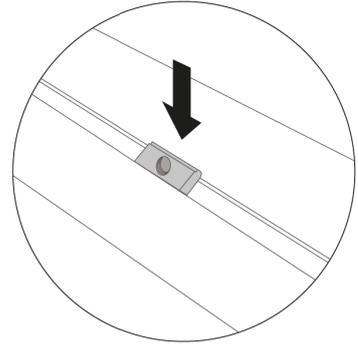


FK-0360

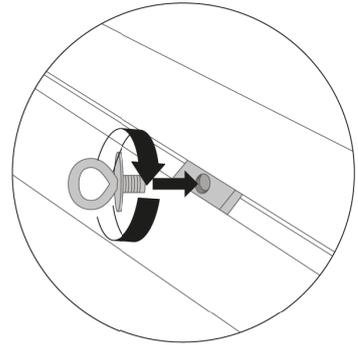


OPTION FOR FOOTPLATE



Down facing frame is the Double 44

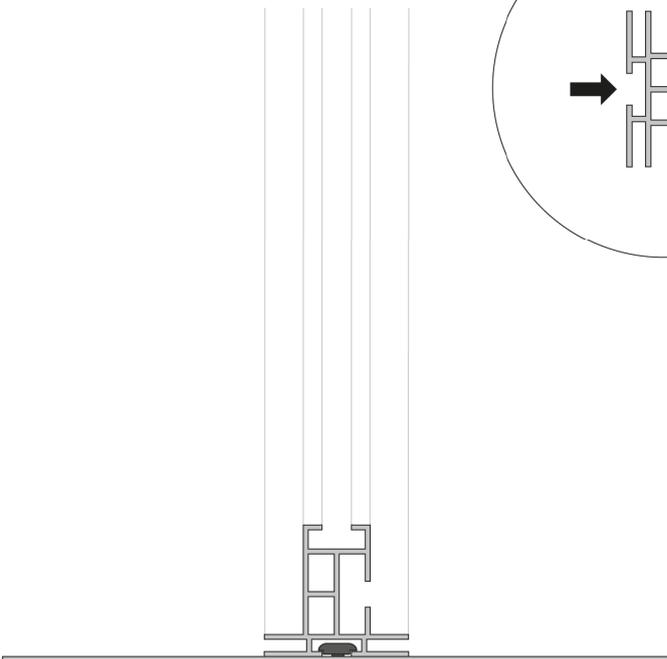


NF-04440

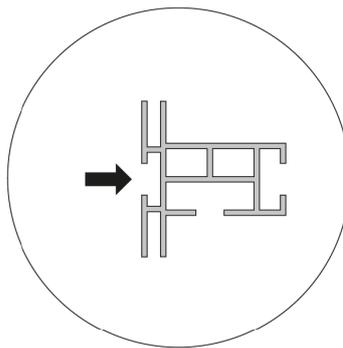

FK-0100 / FK-0105 / FK-0110

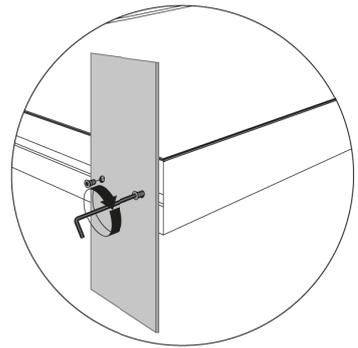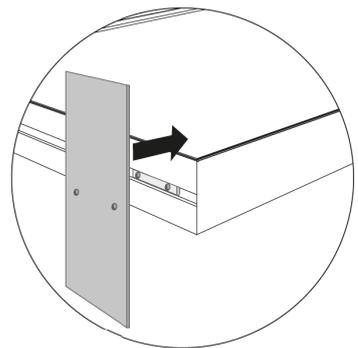

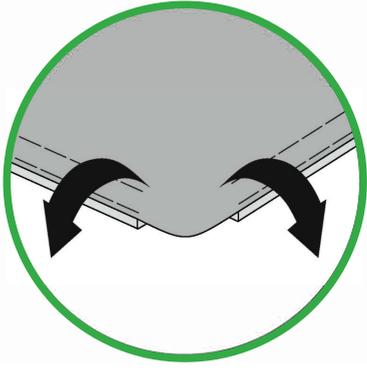


Insert the silicone edge into the frame.



CORRECT



WRONG

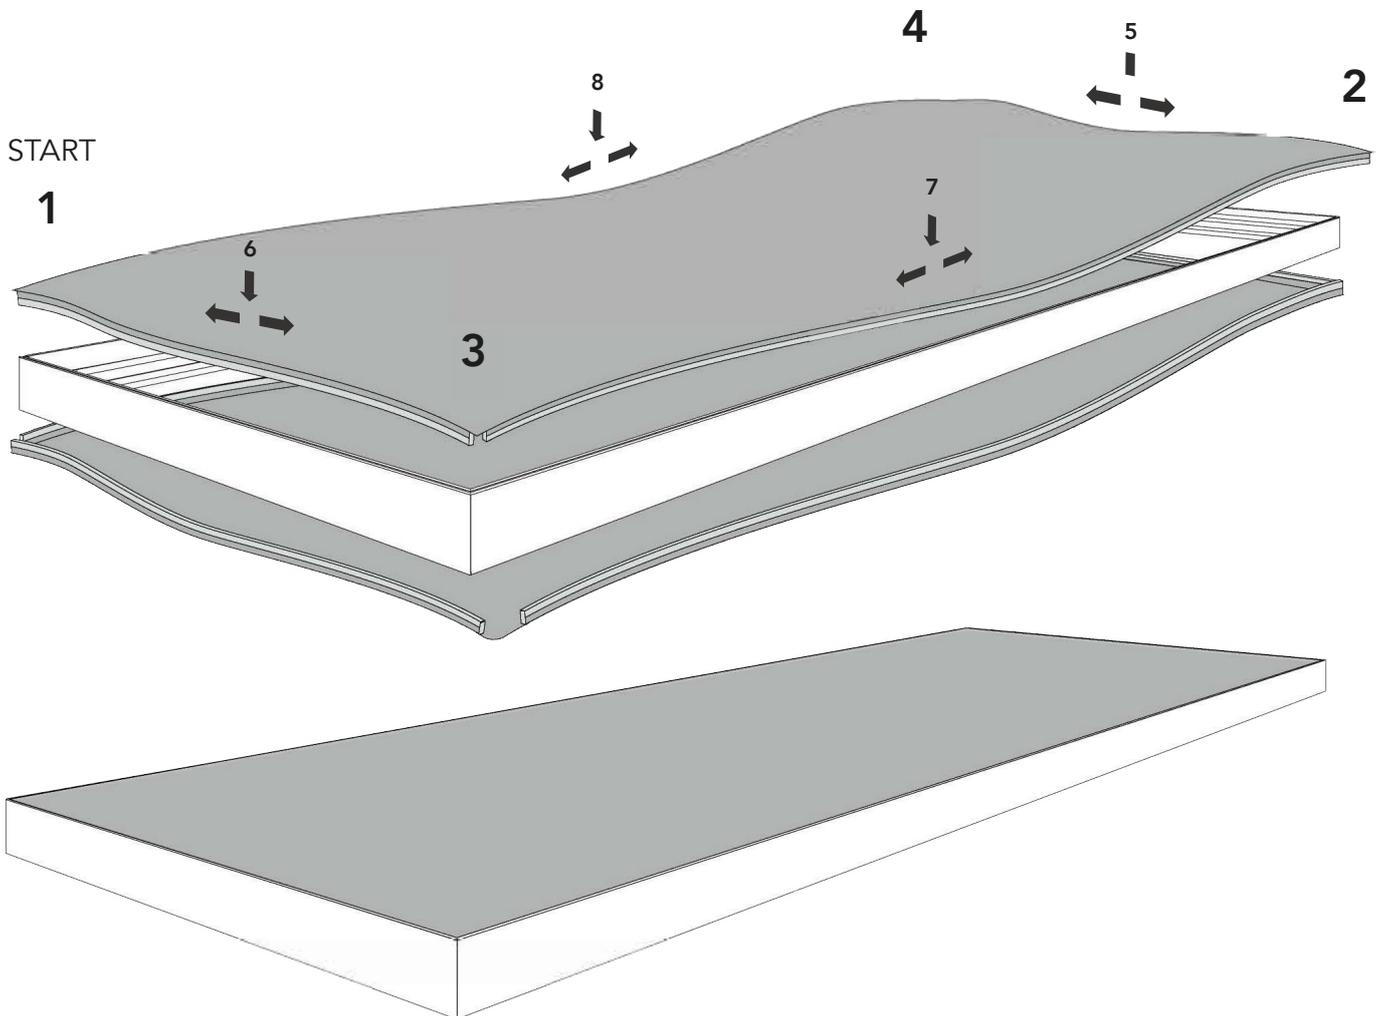

Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**. Next, insert corner **3**, followed by its opposite corner **4**. Make sure the silicone edge faces inward. Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.