




1

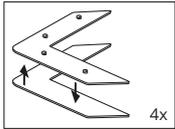


FK-0200

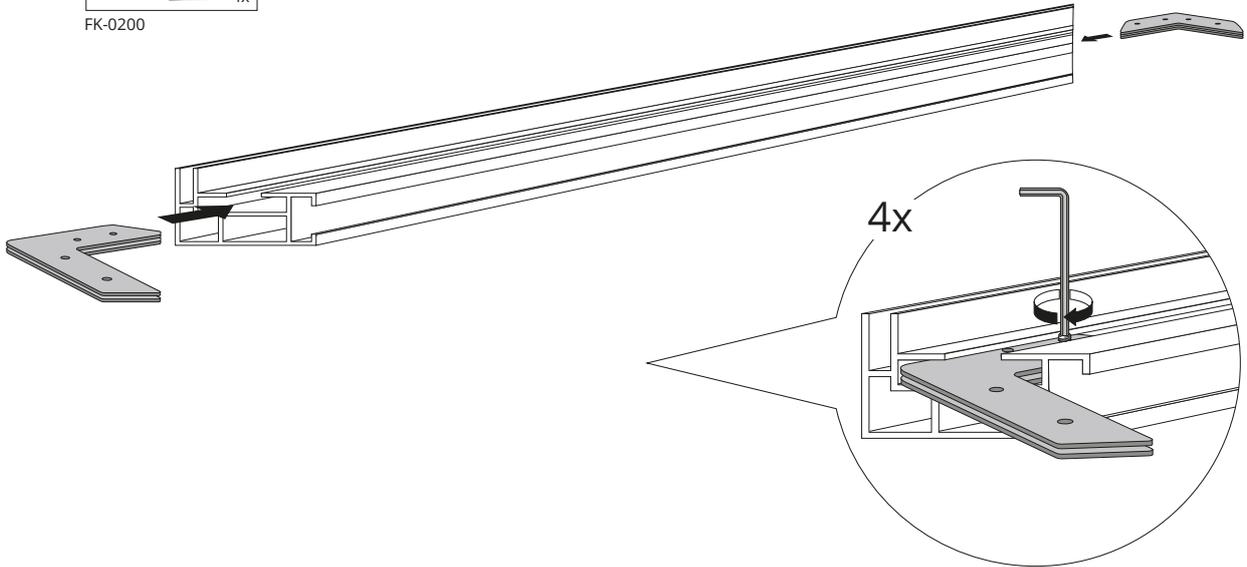



2

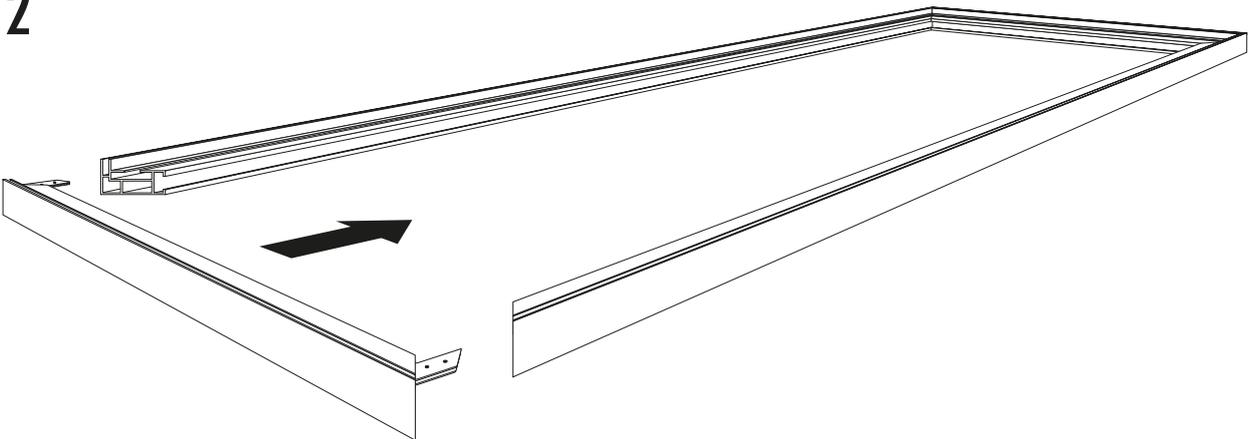











OPTION FOR EXTENSION

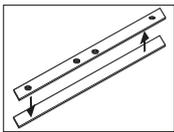

FK-0500




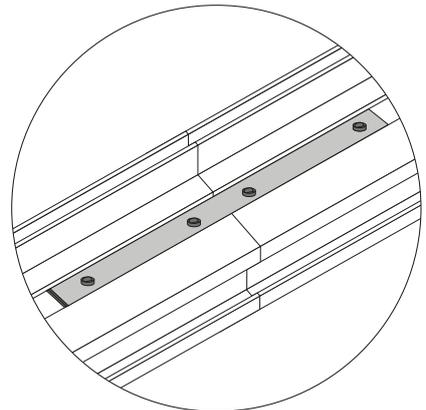
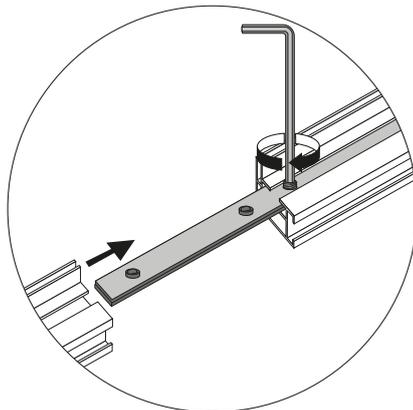


3

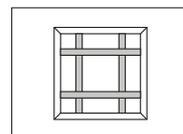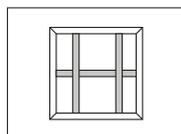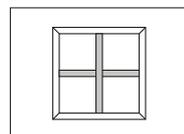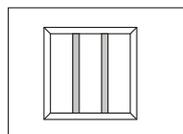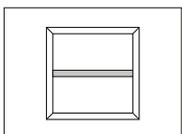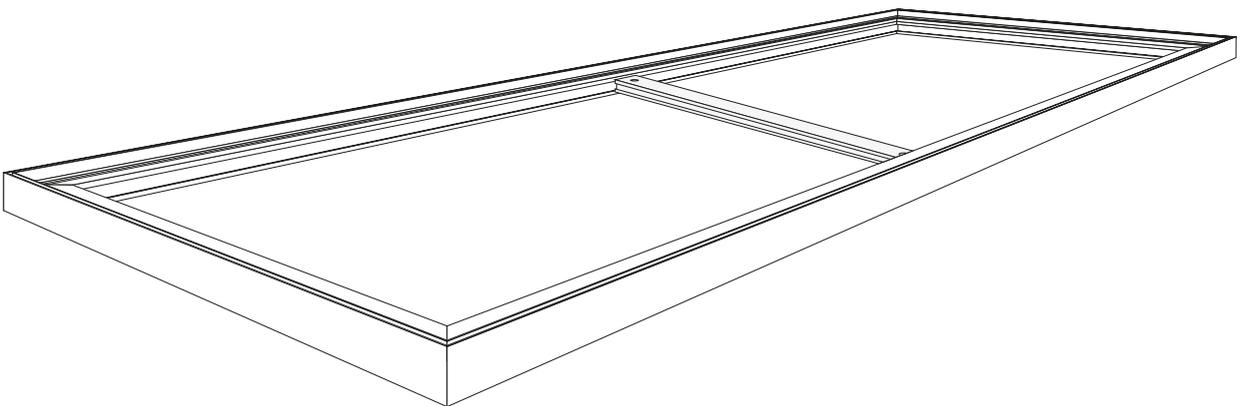
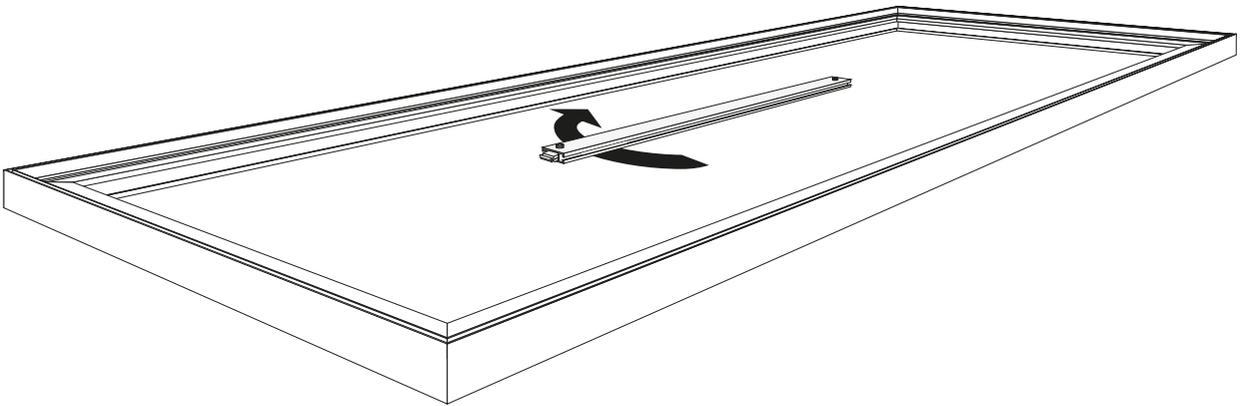
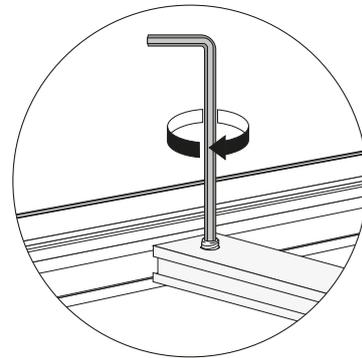
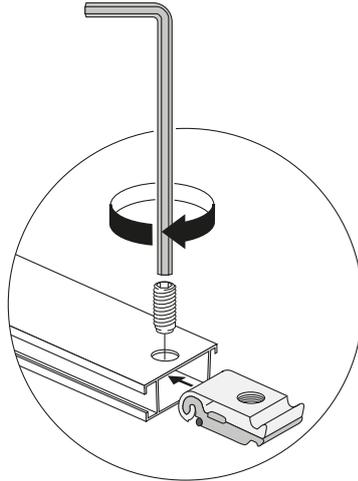
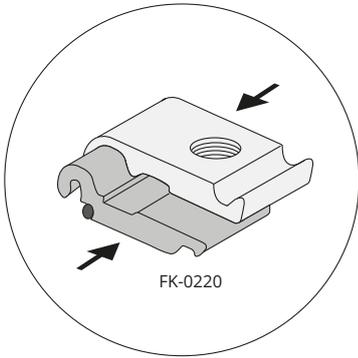


FK-0400 / FK-0410



OPTION WALL MOUNT 1

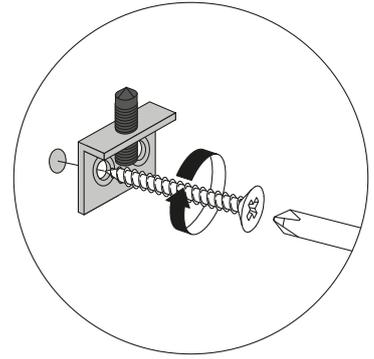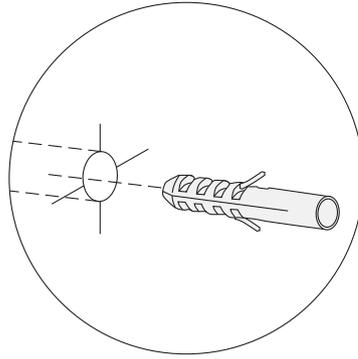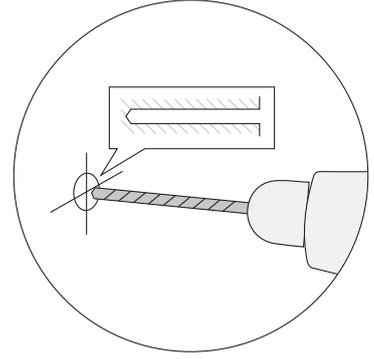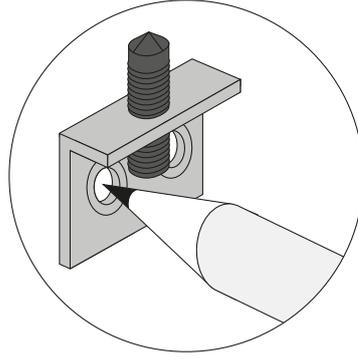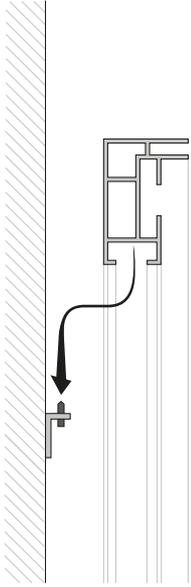


OPTION WALL MOUNT 2

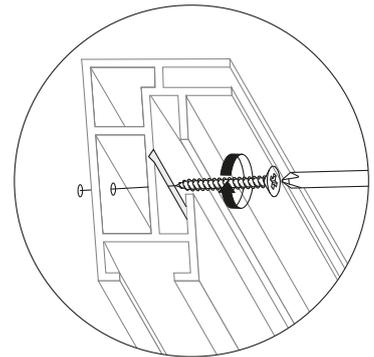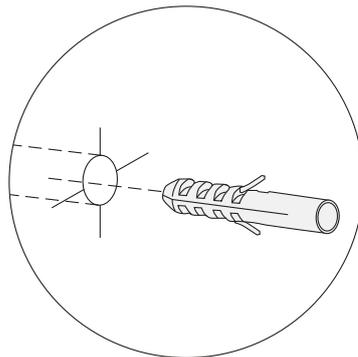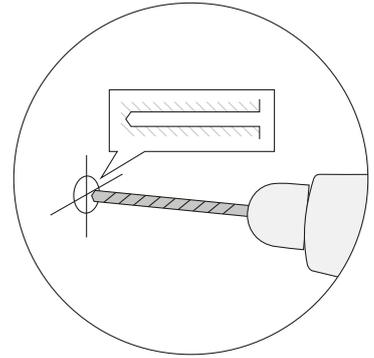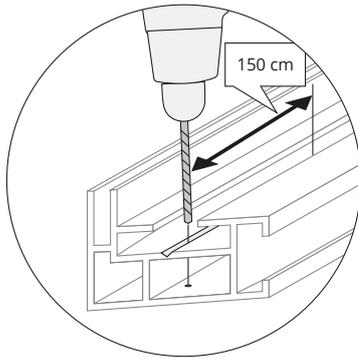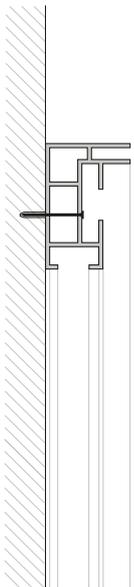


OPTION CEILING MOUNT

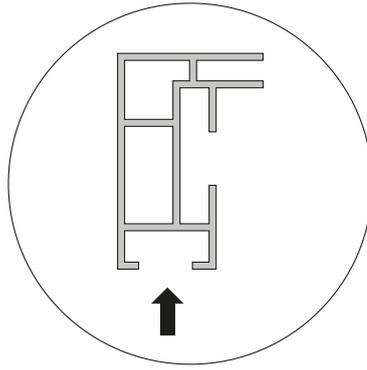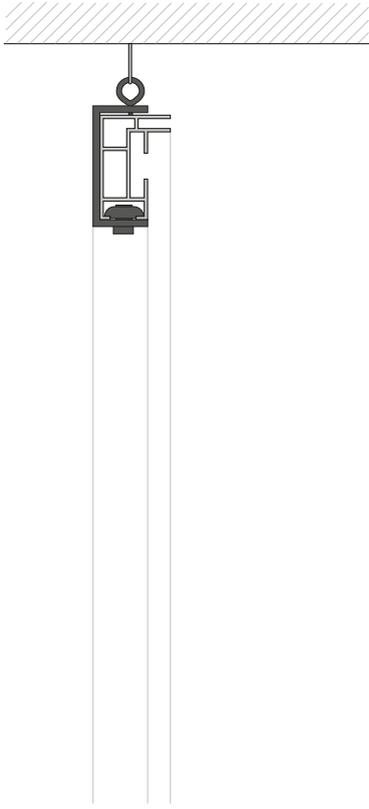


FK-0300

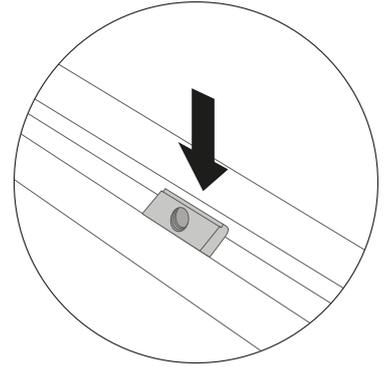


FK-0425

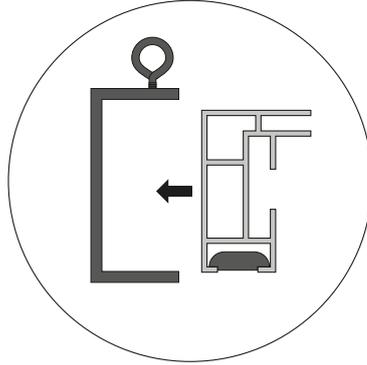


FK-0425

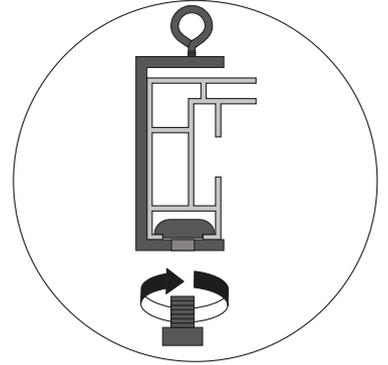

FK-0425

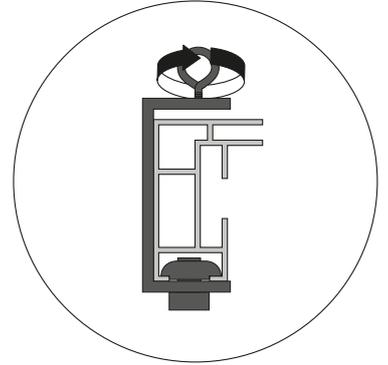

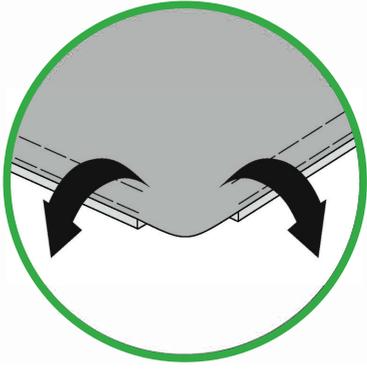


Insert the silicone edge into the frame.



CORRECT



WRONG

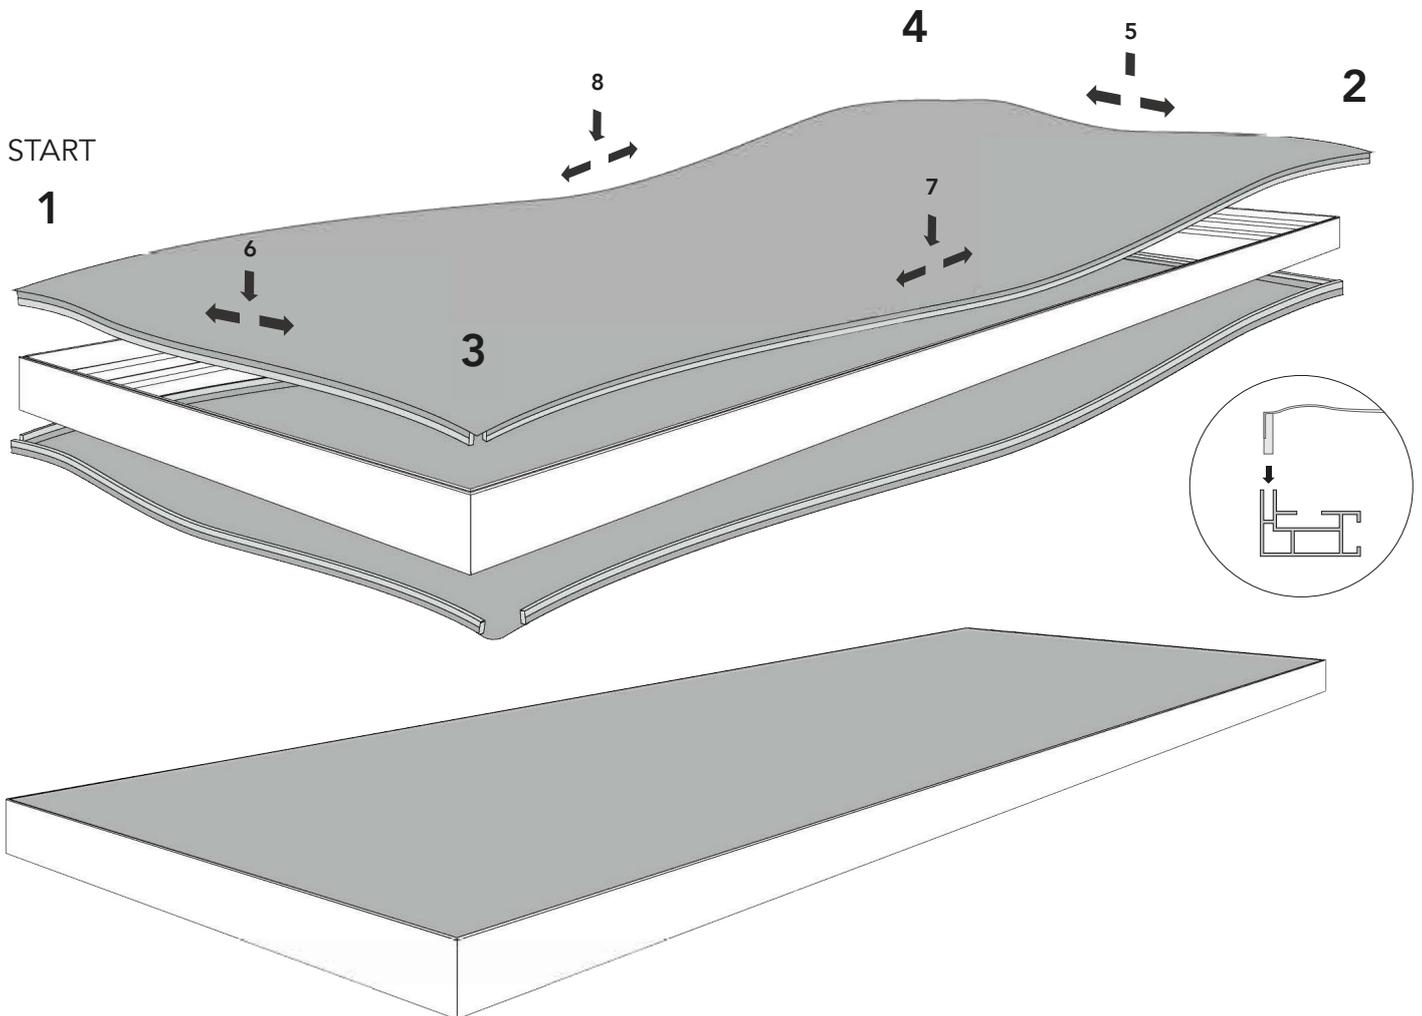

Start with corner **1** and gently press the silicone edge into the frame's channel. Then move to the opposite corner **2**. Next, insert corner **3**, followed by its opposite corner **4**. Make sure the silicone edge faces inward. Once all four corners are in place, start at the bottom middle and work towards the corners. Finish by smoothing the top and sides.